

Installation Instructions for 41608 & 41609 Replacement Sending Unit for Digital Gauge Panels

WARNING: "Do not use seal tape or any other sealant on threads where the sending unit is attached to the engine (the gauge may not work or read incorrectly since the sending unit does not have a good ground connection)."



1-800-345-4545 jeps.com