

# **Installation Instructions for 80665**

## **Brake Fluid Tester**

### **To Check Fluid Quality:**

- Unscrew the brake fluid reservoir, and pull off the cap of the brake fluid tester. Dip the test probes into the brake fluid up to the plastic rim of the device.
- Press the button for power on, Green LED will light up. Insert the tester into reservoir for one second then the test result will be correctly indicated by LED's. The tester will automatically power off after 12 seconds of inactivity.

### **Indicator Lights:**

- **Green:** Battery OK
- **Green:** 0% water
- **Green/Yellow:** Less than 1% of water content in brake fluid
- **Green/Yellow/Yellow:** Less than 2% of water content in brake fluid.
- **Green/Yellow/Yellow/Red:** Less than 3% of water content in brake fluid. The brake fluid should be changed.
- **Green/Yellow/Yellow/Red/Red:** More than 4% of water content in brake fluid. The brake fluid should be changed urgently.

**NOTE:** The data listed above is for your reference only.

**BATTERY (included):** (1) 1.5V, type AAA

### **ATTENTION:**

- Replace battery if the green LED does not light up any longer after you press power on button. Wash the test probes with tap water after every use.
- In case of skin contact with brake fluid, thoroughly wash the affected skin or clothing with water.
- Do not expose brake fluid to atmosphere for a long time as the fluid is highly hygroscopic.



**1-800-345-4545 [jeps.com](http://jeps.com)**