

Installation Instructions for 41610 & 41611 Speedometer Sender

Installation Instructions:

1. Disconnect the mechanical speedometer cable from the transmission and thread the new electronic sensor onto the transmission. Connect the **WHITE** wire on the electronic speed sensor to the speed sensor wire on your gauge. Connect the **BLACK** wire on the sending unit to Ground. Connect the **RED** wire to power with the ignition switch ON.



1-800-345-4545 jeps.com