

Installation Instructions for 62720 Axle Seal

Installation Instructions:

1. This seal is designed to be installed in the end of the tube nearest the ring and pinion. Best results are obtained using a seal in each tube. The seal fits axle tubes with inside diameters between 2-1/2" and 2-3/4".
2. Visually inspect the tube I.D.; a light deburr or removal of excess weld bead is sometimes necessary to ease installation.
3. Before installing, fix the locator band in place by coating the seal body and band-arrow 3A with a hardening type of silicone and allow to dry. Next, before installation, apply a continuous bead of silicone between the barbs noted by 3B. Push or tap the seal into the tube, the lead end toward the wheels, 3C.
4. Lightly grease the spline end of the axle before installing to prevent seal damage.

