


Installation Instructions for 80033 & 80034 Aluminum Floor Jack

BEFORE USING THIS JACK PLEASE FOLLOW INSTRUCTIONS BELOW


HOW TO BLEED THE JACK:

1. Put the jack on a clear, open area such as garage floor.
2. Twist the jack handle counterclockwise about 90 degrees.
3. Pump the handle 5-6 full strokes.
4. Turn the breathing screw (see Figure 1 & 2 below) counterclockwise about 90 degrees with a slotted screwdriver.
5. Wait for about 5 seconds, and then close the breathing screw by turning it completely clockwise.
6. Turn the jack handle clockwise to close the cylinder.
7. You are now ready to operate the hydraulic jack safely.

WARNING: Never twist the handle counterclockwise completely; it may cause permanent damage to the jack.

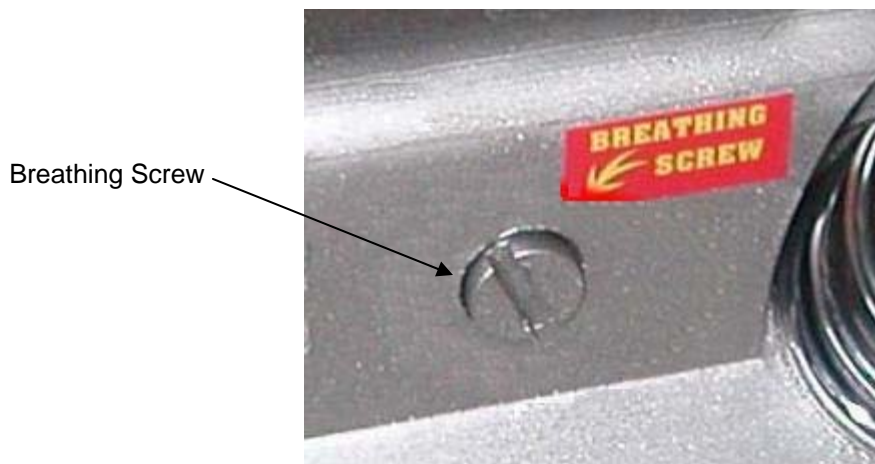

**FIGURE # 1 (#80033)
(3000 lbs. Aluminum Jack)**

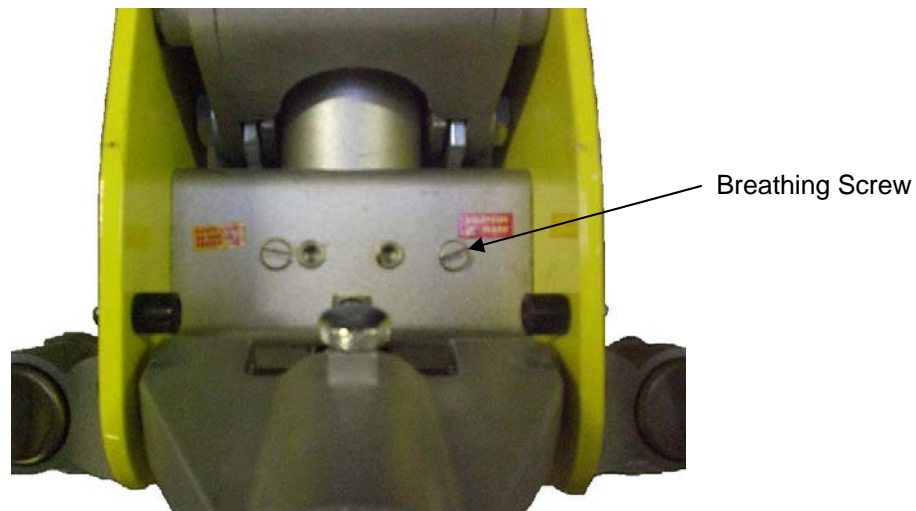

**FIGURE # 2 (#80034)
(4000 lbs. Aluminum Jack)**