

## Valve Spring Installation Notes:

- Springs should be checked in every application
- Springs with dampners should be oiled prior to testing and installing
- Actual coil bind will vary because of the tolerances in the wire diameter
- Coil bind can be checked by compressing the spring in a vise and measuring
- Valve open height should be coil bind plus .100 or more
- Coil bind plus .050 has been used but the life of the spring will be less