

Automatic Transmission Fluid Fill Capacities

Part Number	Transmission Type	Total Fill Capacity (Quarts)	Service Fill Capacity (Quarts)
555-603405	AOD	11.5	6.5
555-60300	TH350	10	4
555-60304	TH350	10	4
555-60307	TH350	10	4
555-60305	TH350 BOP	10	4
555-60309	700-R4	11.5	6
555-60320	700-R4	11.5	6
555-603020	4L60E	12.5	6
555-603025	4L60E	12.5	6
555-603010	4L60E	11	6
555-603015	4L60E	11	6
555-603022	4L65E	12.5	6
555-603024	4L65E	12.5	6
555-603026	4L70E	13.5	7.7
555-603234	4L70E	13.5	7.7
555-60325	4L80E	13.5	7.7
555-603052	4L80E	13.5	7.7
555-60327	4L80E	13.5	7.7
555-603032	4R70W	12	7
555-603034	4R70W	12	7
555-603042	4R75W	12	7
555-603044	4R75W	12	7
555-603046	5R55E	10	4
555-603048	5R55E	10	4

Capacities will vary slightly depending on your converter diameter and cooler size.

- **TOTAL FILL CAPACITY:** The quantity necessary when installing a new transmission, torque converter and cooler.
- **SERVICE FILL CAPACITY:** The quantity necessary when draining the pan and changing the filter. Transmission only before start up.
- **FILL LEVEL:** After filling your transmission check the fluid level on your dipstick, once the vehicle is up to operating temperature, to ensure you have the appropriate amount.
- **INSTALLATION:** Always fill your torque converter prior to installation to prevent premature wear.



1-800-345-4545