


Installation Instructions for 80470 Snap Ring Pliers

- Includes Plier & 4 tip assemblies: (2) Straight, (1) 45°, (1) 90°
- Spring retainer attaches tip assemblies to either side of plier handle for internal or external applications.
- Plier range: (3/8" to 2") / (10mm to 50)

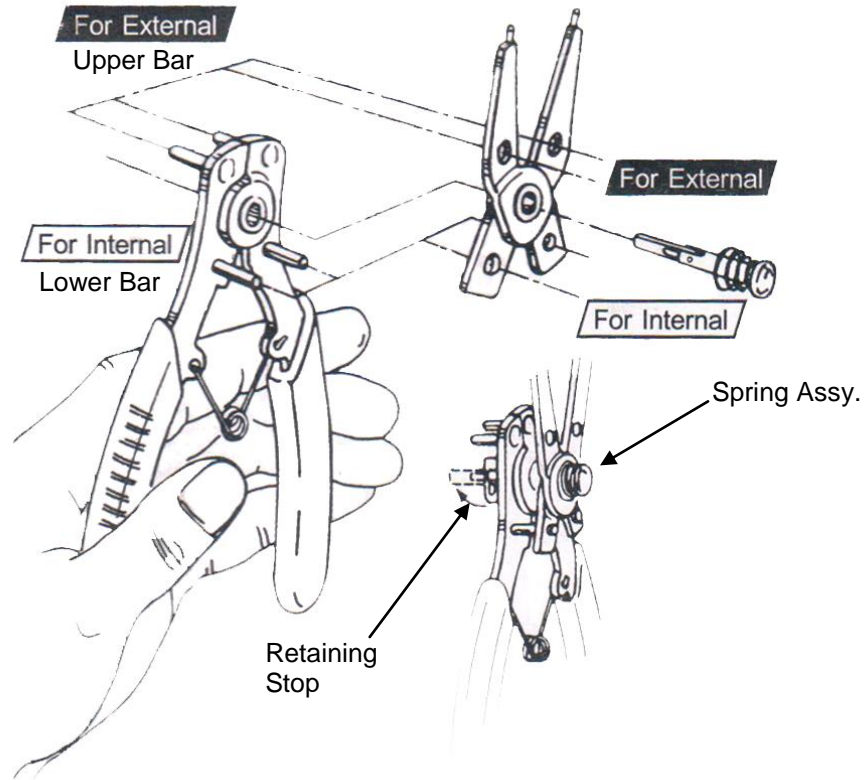

- To remove tips: turn retaining stop to horizontal position to release spring.
- To assemble tips: align lower holes with lower bars for internal applications, upper holes with upper bars for external applications.
- Slide retaining spring assembly through center hole, turn bar and slide to lock.

