

Installation Instructions for 80588 Cable/Wire Tie Gun


Operation: Hand operated gun automatically cuts cable/wire tie when required tension is achieved.

Tension Adjust: Tension on the cable/wire tie is controlled by a knurled wheel located in the handle. A window above the wheel indicates the tension level from 1 to 3. Rotating the wheel from left to right increases the tension on the cable/wire tie. A setting of 2 or slightly above is optimum for most cable/wire ties. Factory setting is at 1.

Maintenance: Two pivot points, one at the top of the trigger and where the cutter head swivels may need a drop of oil over time.


1

Insert the strap into head and pull through until hand tight.

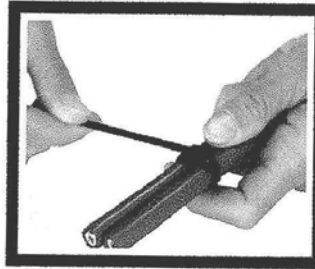

2

Insert the tail of the tie into the slot in the nose of the gun

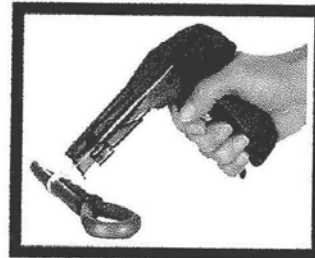

3

Pump the trigger, blade will actuate when set tension level is achieved.

