


Firing Order
Chevy Small & Big Block

Chevy Small & Big Block
(Non-LS Engine)

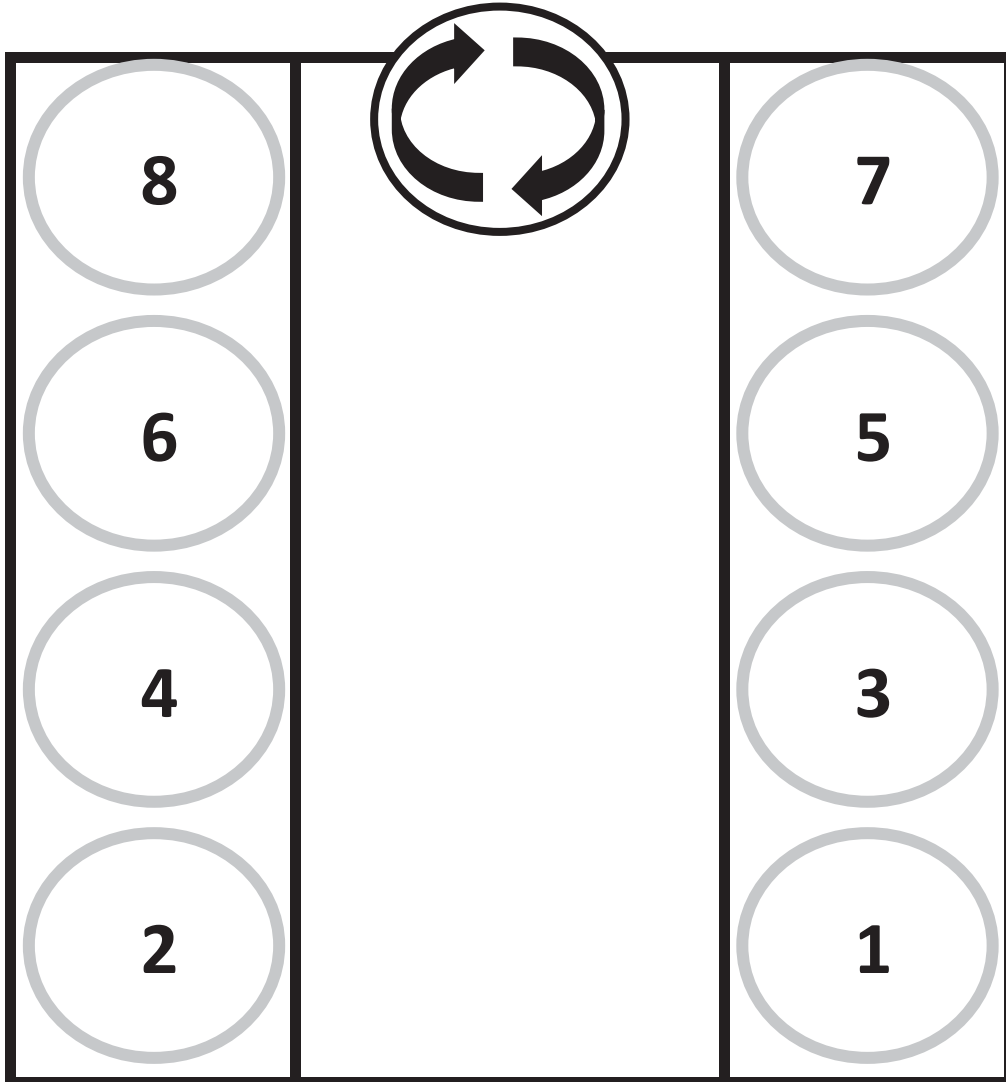

FRONT

1 - 8 - 4 - 3 - 6 - 5 - 7 - 2