



Directional Signal Exploded View

INSTRUCTIONS

Installation Instructions:

1. If steering wheel has been refinished make sure center area (see shaded area in diagram) of Steering Wheel is unpainted, this will cause the horns not to function. The bare metal is part of the ground for the horn system.
2. Insert the Nylon Bushing and Spring Contact into hole in steering wheel #12316 (paintable) or #12317 (black painted).
3. Insert the Concaved Metal Spring into place. The spring edges will rest around the bare metal center area of steering wheel on the painted edge. Align the holes with the three threaded holes in Steering Wheel.
4. Place the Plastic Spacer on top of Cocaved Spring, keeping it aligned with threaded holes.
5. Place the Horn Ring #255 (210 and Belair Models) against Plastic Spacer.
6. Insert the Plastic Ring with three pedestals through the holes on the Horn Ring, Plastic Spacer and Cocaved Spring. Install the Three Screws through the ring and snug them down. (do not over tighten this could crack the plastic ring)

