



UNIVERSAL FUEL PRESSURE REGULATOR P/N 512-504 Installation Instructions


WARNING! THESE INSTRUCTIONS MUST BE READ AND FULLY UNDERSTOOD BEFORE BEGINNING INSTALLATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN POOR PERFORMANCE, VEHICLE DAMAGE, PERSONAL INJURY, OR DEATH. IF THESE INSTRUCTIONS ARE NOT FULLY UNDERSTOOD, INSTALLATION SHOULD NOT BE ATTEMPTED. PLEASE CONSULT HOLLEY TECH SERVICE OR A QUALIFIED MECHANIC.

INTRODUCTION:

This instruction sheet contains all the information needed to install this fuel pressure regulator. Please read all the **WARNINGS** and **NOTES**. They contain valuable information that can save you time and money. Holley Performance Products cannot and will not be responsible for any alleged or actual engine or other damage, or other conditions resulting from misapplication of the fuel pressure regulator described herein. However, it is our intent to provide the best possible products for our customer; products that perform properly and satisfy your expectations. Should you need information or parts assistance, please contact our Technical Service Department at 1-270-781-9741, Monday through Friday, 7 a.m. to 5 p.m. Central Time. Please have the part number of the product you purchased when you call.

REGULATOR CONNECTIONS:

This regulator has two 8 AN inlet fittings. With this regulator, it does not matter which inlet is used for fuel delivery. The return/outlet fitting is 6AN. The regulator has a pressure range of 20 to 65 psi. It comes preset at 40 psi. To adjust the pressure, loosen the lock nut and turn the adjustment screw clockwise to raise the pressure, counter-clockwise to lower the pressure. Disconnect the manifold vacuum reference when adjusting the fuel pressure.

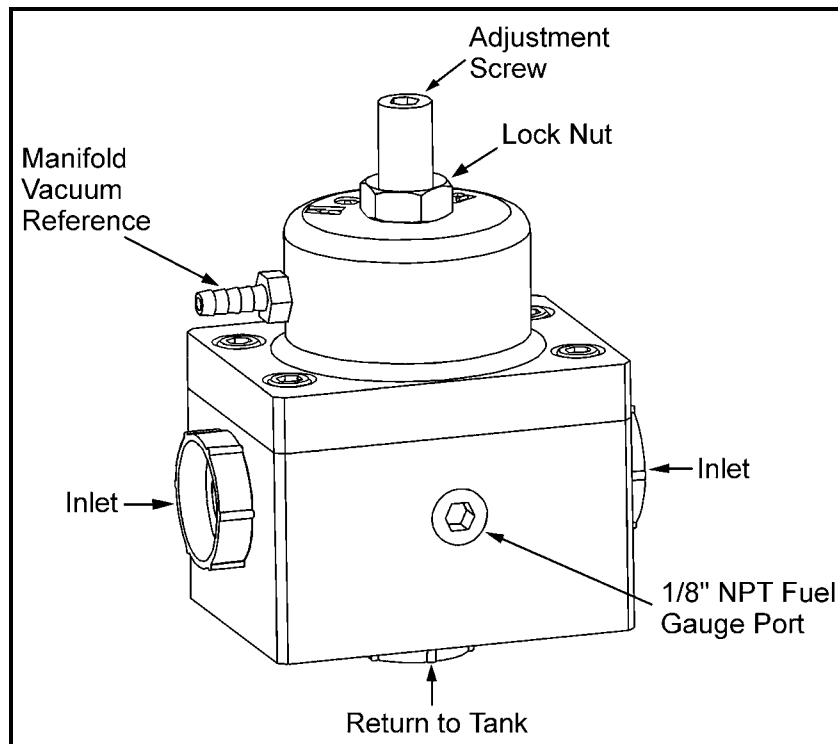

Copyright © 1998
Printed in USA

199R-10037
Date: 10-30-98

Holley
Performance Products Inc