

## ***Installation Instructions for 81692 Torque Angle Gauge***

This tool allows an easy & accurate way install torque-to-yield fasteners on many late model engines.

- Use this Tool with a 1/2" drive ratchet wrench or breaker bar (not included)
- Adjust the clear angle gauge to zero
- Hold the base while you add the additional torque angle to the manufactures specifications.

**Note:** Torque-to-Yield fasteners should not be re-used since they won't stretch in the same manor and may fail if they are reused.



**1-800-345-4545 [jeps.com](http://jeps.com)**