

## ***Installation Instructions for W84004 Hydraulic Valve Lifter Remover***

1. Position the spreadable collet in the upper portion of the lifter
2. Push tool down to depress the lock ring
3. Using a 7/16 in. wrench, hold the collet and rotate tool handle clockwise to spread collet
4. When collet has been secured, repeatedly pull slide hammer up against slide hammer stop using the force to pull lifter free from lifter bore.



**1-800-345-4545 [jeps.com](http://jeps.com)**