



**Air Bleed Valve
P/N 63765**

DO NOT INSTALL THIS VALVE WHEN COOLING SYSTEM AND ENGINE ARE HOT. Wait until engine and cooling system components are cool to the touch. You can receive serious burns if this warning is not followed.

- For optimum performance, install at the highest point in the system. This Valve can also be installed on the water pump.
- Drill and tap hole for 1/8"NPT thread, install Air Bleed Valve with teflon tape or similar thread sealer to prevent leaks.
- After system is filled, run engine and water pump, push button on the Air Bleed Valve to release air. CAUTION: only do this while engine is cool.



**Air Bleed Valve
P/N 63765**

DO NOT INSTALL THIS VALVE WHEN COOLING SYSTEM AND ENGINE ARE HOT. Wait until engine and cooling system components are cool to the touch. You can receive serious burns if this warning is not followed.

- For optimum performance, install at the highest point in the system. This Valve can also be installed on the water pump.
- Drill and tap hole for 1/8"NPT thread, install Air Bleed Valve with teflon tape or similar thread sealer to prevent leaks.
- After system is filled, run engine and water pump, push button on the Air Bleed Valve to release air. CAUTION: only do this while engine is cool.

***For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time***

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. A
091202

Visit Us At www.moroso.com

63765INST

***For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time***

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. A
091202

Visit Us At www.moroso.com

63765INST