



Die Cast Aluminum Valve Cover

Breather Hole Removal

1. Position the Valve Cover topside down on a surface that will not scratch or mar the finish of the Valve Cover.
2. Make a center-punch mark in the Breather Hole you will be removing. (Some Moroso Valve Covers already have this mark). Use a hole saw to drill a 1-3/16" hole through the Valve Cover.
3. Use a round file to increase the hole diameter to approximately 1.22" and to remove any flashing.

Check the Moroso catalog for a selection of accessories to complement your new Moroso Valve Covers, such as Breathers, Wing Nuts, Hold Down Tabs, Stud Kits, PCV Grommets, Valve Cover Gaskets and Crankcase Evacuation Systems.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

**MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906**

Rev.A
060700

Visit Us At www.moroso.com

68450INST



Die Cast Aluminum Valve Cover

Breather Hole Removal

1. Position the Valve Cover topside down on a surface that will not scratch or mar the finish of the Valve Cover.
2. Make a center-punch mark in the Breather Hole you will be removing. (Some Moroso Valve Covers already have this mark). Use a hole saw to drill a 1-3/16" hole through the Valve Cover.
3. Use a round file to increase the hole diameter to approximately 1.22" and to remove any flashing.

Check the Moroso catalog for a selection of accessories to complement your new Moroso Valve Covers, such as Breathers, Wing Nuts, Hold Down Tabs, Stud Kits, PCV Grommets, Valve Cover Gaskets and Crankcase Evacuation Systems.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

**MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906**

Rev.A
060700

Visit Us At www.moroso.com

68450INST



Die Cast Aluminum Valve Cover

Breather Hole Removal

1. Position the Valve Cover topside down on a surface that will not scratch or mar the finish of the Valve Cover.
2. Make a center-punch mark in the Breather Hole you will be removing. (Some Moroso Valve Covers already have this mark). Use a hole saw to drill a 1-3/16" hole through the Valve Cover.
3. Use a round file to increase the hole diameter to approximately 1.22" and to remove any flashing.

Check the Moroso catalog for a selection of accessories to complement your new Moroso Valve Covers, such as Breathers, Wing Nuts, Hold Down Tabs, Stud Kits, PCV Grommets, Valve Cover Gaskets and Crankcase Evacuation Systems.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

**MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906**

Rev.A
060700

Visit Us At www.moroso.com

68450INST



Die Cast Aluminum Valve Cover

Breather Hole Removal

1. Position the Valve Cover topside down on a surface that will not scratch or mar the finish of the Valve Cover.
2. Make a center-punch mark in the Breather Hole you will be removing. (Some Moroso Valve Covers already have this mark). Use a hole saw to drill a 1-3/16" hole through the Valve Cover.
3. Use a round file to increase the hole diameter to approximately 1.22" and to remove any flashing.

Check the Moroso catalog for a selection of accessories to complement your new Moroso Valve Covers, such as Breathers, Wing Nuts, Hold Down Tabs, Stud Kits, PCV Grommets, Valve Cover Gaskets and Crankcase Evacuation Systems.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

**MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906**

Rev.A
060700

Visit Us At www.moroso.com

68450INST