



## Parts List

- (1) Air Oil Separator
- (1) Billet Clamp
- (1) Billet Clamp Saddle
- (1) Billet Spacer
- (2) Stainless Steel Mounting Brackets
- (1) ½" Barbed Fitting
- (1) 3/8" Barbed Fitting
- (1) Ball Valve
- (1) 90 Degree Drain
- (1) Drain Cap
- (2) ¼-20x5/8 SHCS
- (4) ¼-20x1 SHCS
- (2) ¼-20 Nylock Nuts
- (1) 3/8" Hose
- (1) ½" Hose

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)

Rev A  
71513

85666\_85667INST



Step 1: Remove intake cover.



Step 2: Locate PCV line.

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)



Step 3: Remove PCV line from intake.




Step 4: Remove PCV line from PCV valve.

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)



Step 5: Install 3/8" hose to PCV valve.

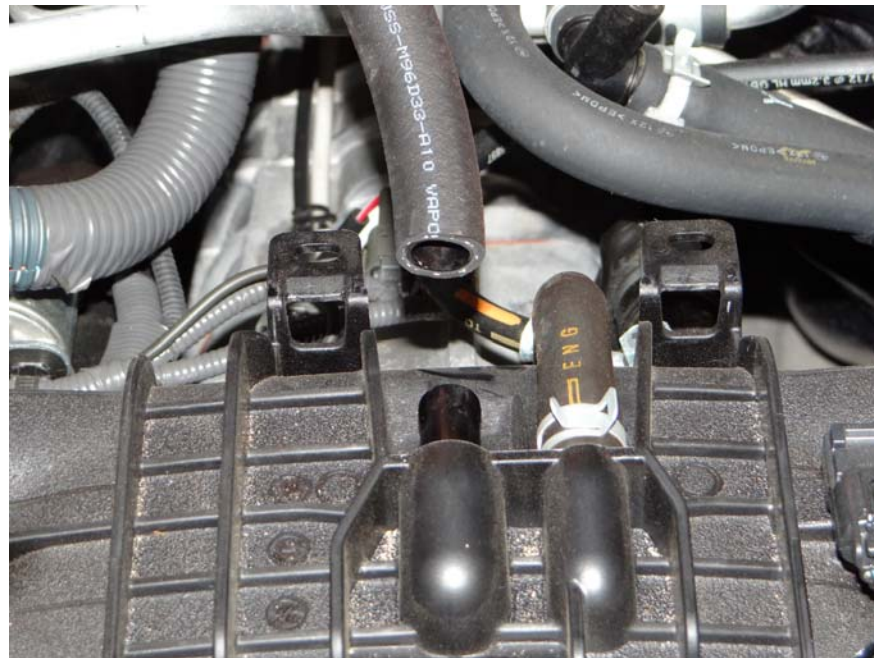

Step 6: Install 1/2" hose to intake nipple.


For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)




For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)

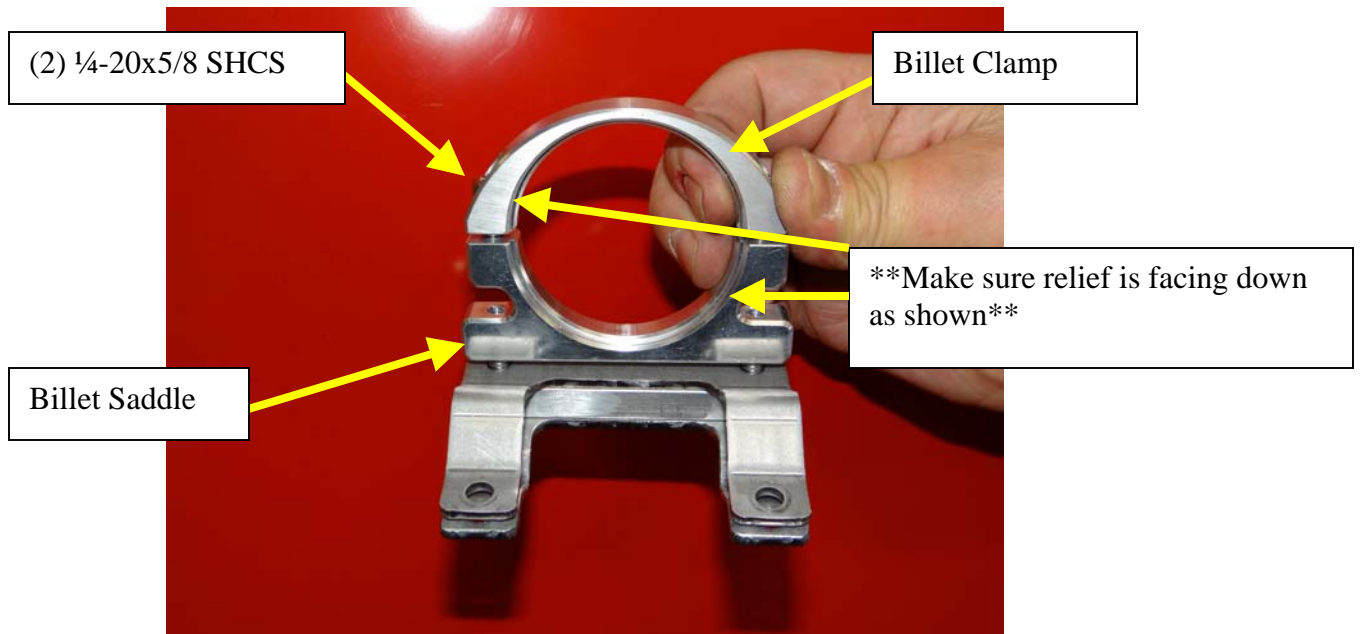

Step 7: Assemble Billet Clamp to stainless mounting brackets as shown.

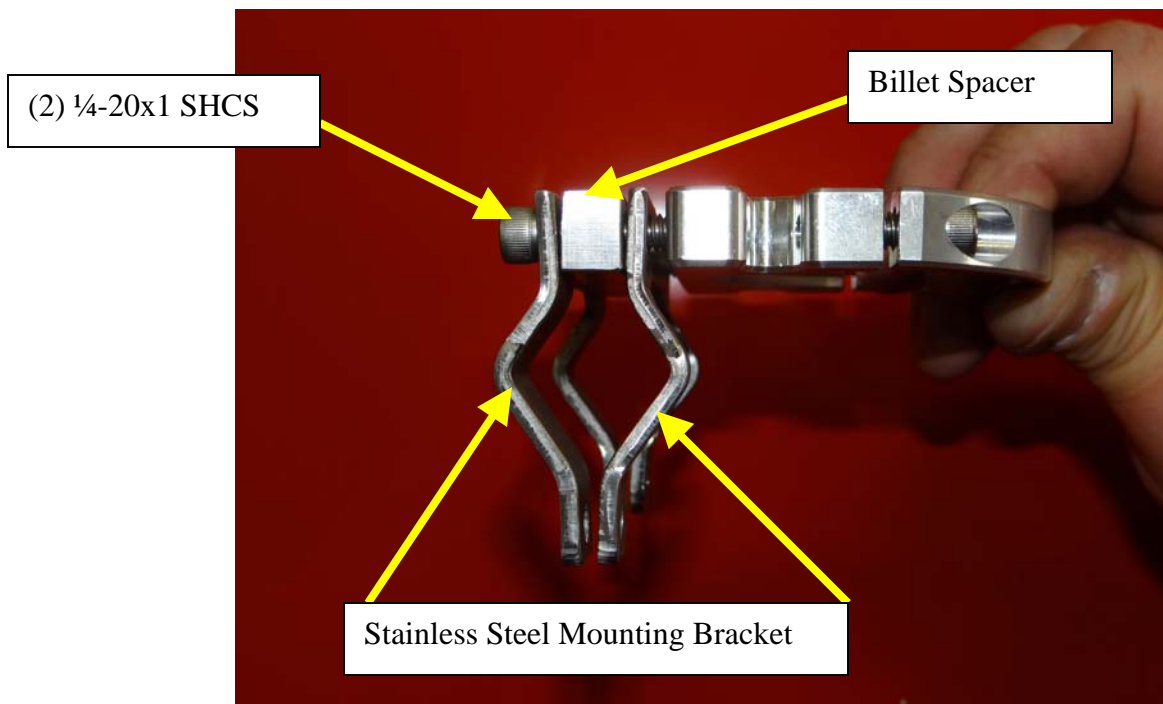

**Note: Do not tighten hardware at this time.**

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.  
80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)




Step 8: Install mounting bracket to passenger's side strut brace as shown.




For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)

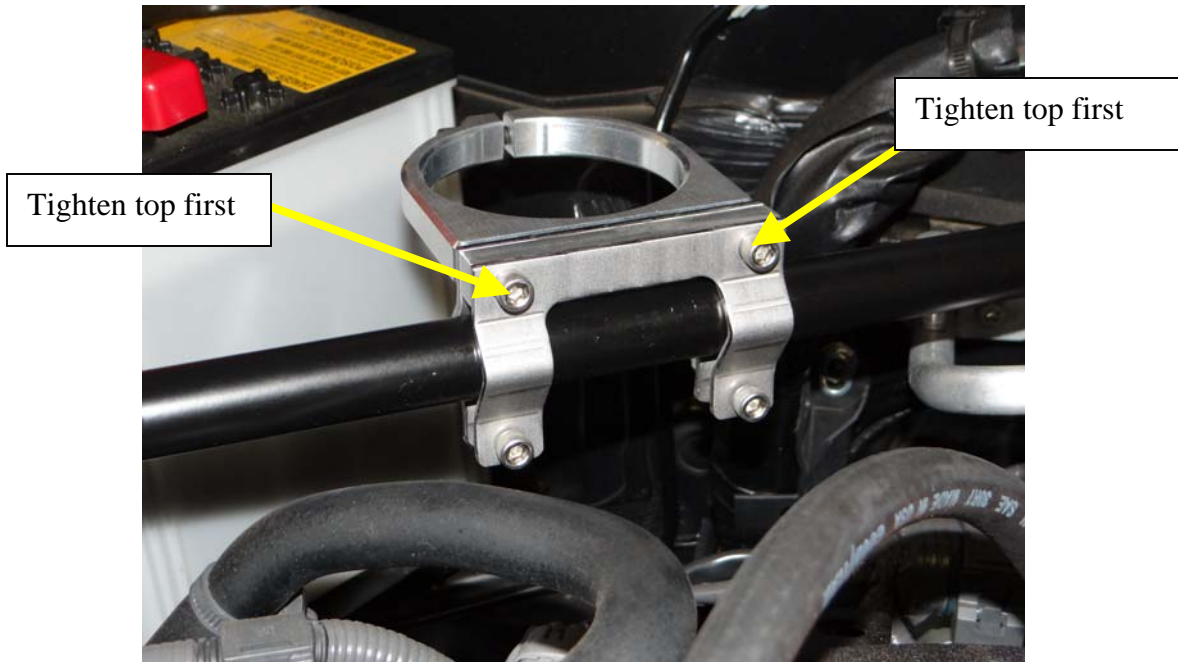

Step 9: Tighten top (2) 1/4-20x1 SHCS first, then install (2) bottom 1/4-20x1 SHCS with (2) nylock nuts.

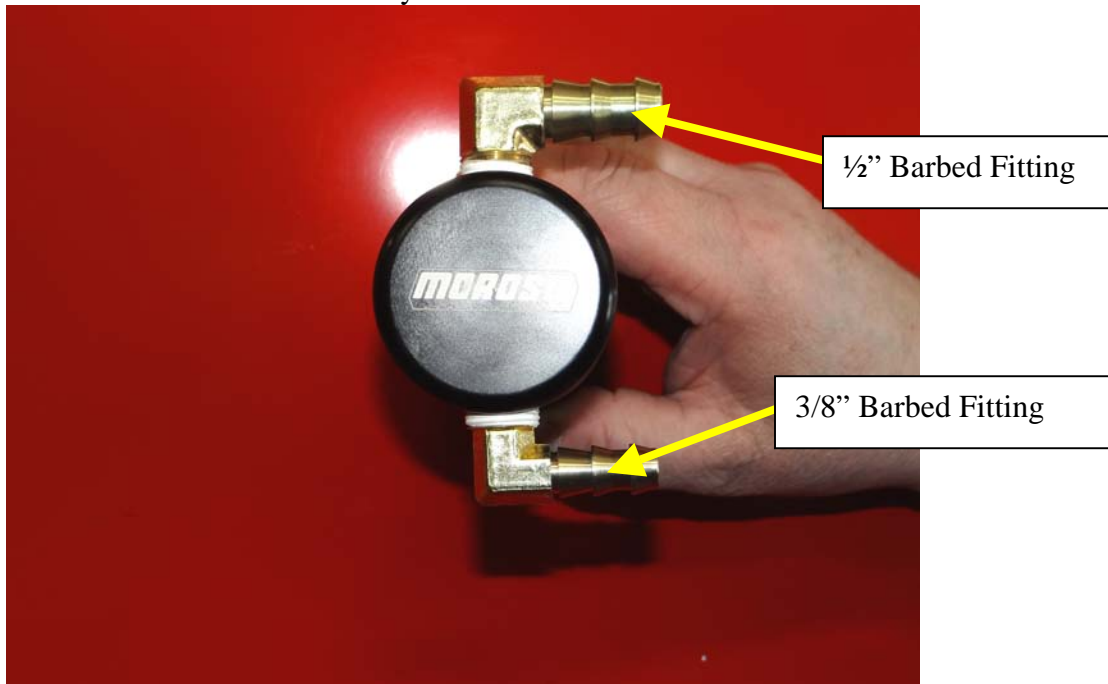

Step 10: Assemble 3/8" barbed fitting and 1/2" barbed fitting using Teflon Tape.

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
www.moroso.com





Step 11: Insert Air Oil separator into billet clamp.



Step 12: set height as shown.

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)



Step 13: Orientate barbed fitting towards driver's side and tighten clamp.



Step 14: Install 3/8" hose to 3/8" barbed fitting on Air Oil Separator.

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)



Step 15: Install 1/2" hose to 1/2" barbed fitting on Air Oil Separator.



Step 16: Re-install intake cover.

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)



Make sure bottom cup can be removed for draining.



Installation Complete

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)



**Draining of Air Oil Separator is needed; this will depend on driving conditions (i.e.) normal day to day driving check every 1,000 miles until a baseline is established. A good baseline is to drain the Air Oil Separator when it is about HALF full. This will vary with temperatures (cold winters vs. hot summers). For track usage Air Oil Separator will need to be drained after every outing.**

For Technical Assistance, call Moroso's Tech Line  
(203)-458-0542, 8:30am-5:00pm Eastern Time  
MOROSO PERFORMANCE PRODUCTS, INC.  
80 CARTER DRIVE  
GUILFORD, CT 06437  
[www.moroso.com](http://www.moroso.com)