HIGH PERFORMANCE TRANSMISSION PARTS

Instructions

Accumulator Piston Kit

Part No.

44894-01MK


- Pistons (5)
- Guide Seals (10)

PTFE, Solid

• Seal (5)

PTFE, Scarf-Cut

Chrysler 45RFE, 545RFE, 65RFE, 66RFE, 68RFE

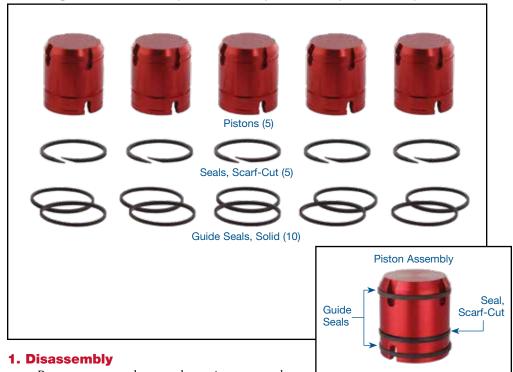

- a. Remove screws and accumulator piston cover plate.
- b. Remove OE piston and spring(s). If replacing multiple pistons, note the spring locations and quantities.
- c. Clean and inspect the bore.



NOTE: Inspect accumulator bores in valve body for scuffing and wear in the area indicated (**Figure 1**). The bore should be smooth in the hatched area shown.

2. Assembly and Installation

- a. Install the two solid guide seals in grooves at each end of the piston.
- b. Install the scarf-cut seal in the middle position groove.
- c. Install piston into bore. If solid guide seals haven't been re-sized, extra care should be taken as each is compressed into the bore.



NOTE: Solid guide seals will have some drag until they have undergone a heat cycle.

