


Firing Order
Ford FE Engine 332-428

Ford FE Engine 332-428

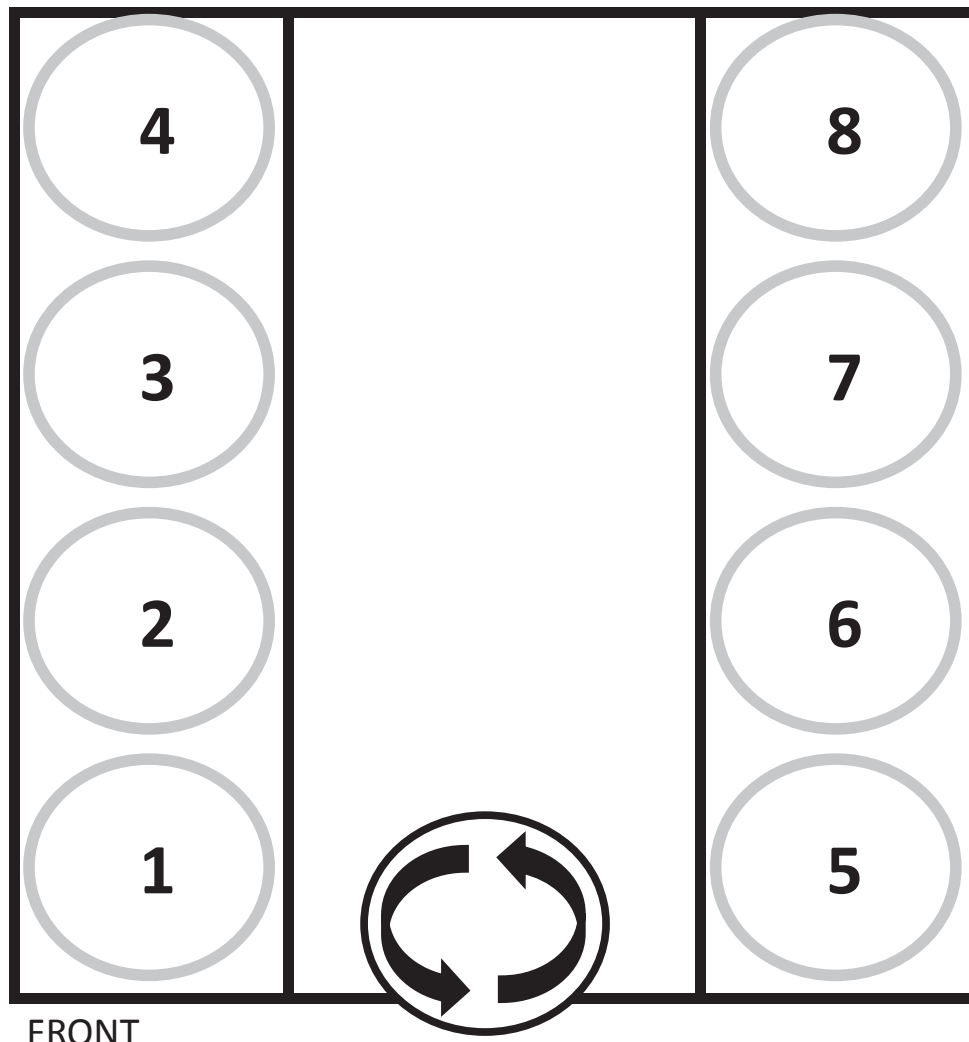

1 - 5 - 4 - 2 - 6 - 3 - 7 - 8