

F250/F350

NOTE: All surfaces should be clean and dry before attaching brackets.

1. Place wheels in a straight forward position.
2. Place stabilizer bracket "A" against inside of frame as shown. Place back up strap on the outside of frame. Install bolts through back up strap and through bracket "A". Secure with lock washers and nuts provided.
3. Attach both stabilizer piston rod ends to bracket "A" using bushing stack up instructions printed on bag.
4. Loosely attach stabilizer bracket "B" to the tie rod as shown using u-bolt and flange lock nuts.
5. Attach both stabilizers to bracket "B" as shown using bushing stack up instructions printed on bag.
6. Extend stabilizer piston rods 4 1/2 inches. Rotate bracket "B" to obtain best location. Tighten all nuts securely on u-bolts.
7. Turn wheels fully to the right and left making sure that no interference occurs and that wheel stops are fully contacted.
8. Re-check all nuts and pal nuts for tightness before releasing installation.

BOX CONTENT

- 2 – stabilizer cylinders
- 1 – mounting strap
- 1 – mounting bracket (frame)
- 1 – mounting bracket (tie rod)
- 1 – installation instruction sheet


POLY BAG # 1

- 4 – rubber bushings
- 4 – cup washers
- 2 – lock washers 3/8
- 2 – hex nuts 3/8-24
- 2 – pal nuts 3/8-24
- 2 – hex head bolts 3 1/2"
- 2 – hex head bolts 4 1/4"
- 2 – hex nuts 3/8-16

POLY BAG # 2

- 4 – rubber bushings
- 4 – cup washers
- 2 – hex nuts 3/8-24
- 2 – pal nuts 3/8-24
- 6 – flange lock nuts 5/16-18
- 3 – u-bolts 1 1/8"
- 3 – u-bolts 1"

CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.

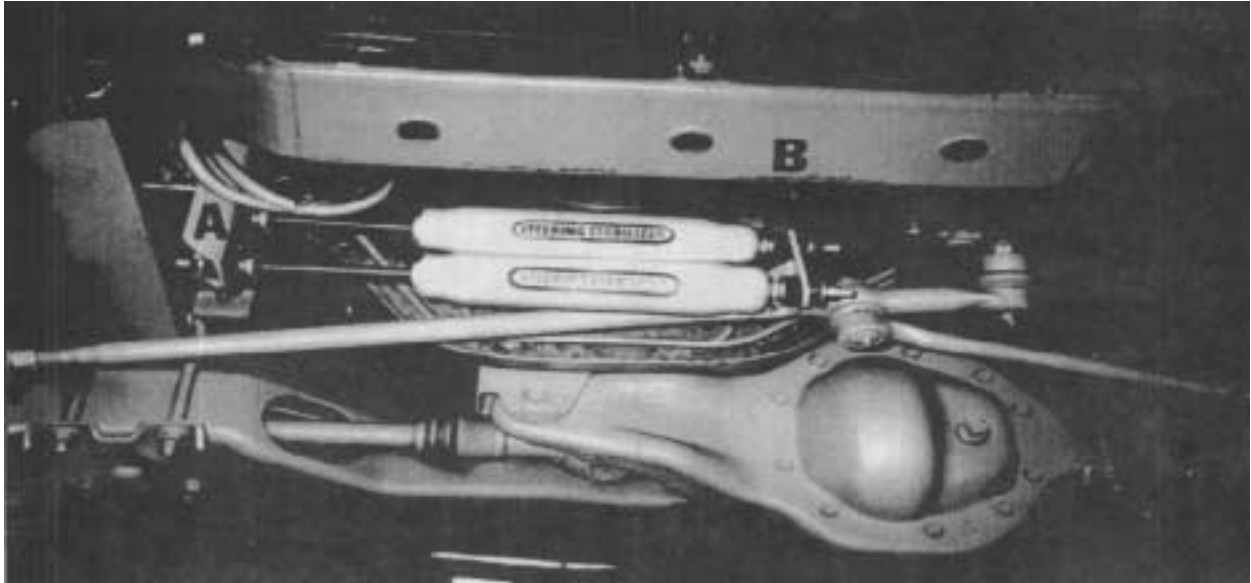

F250/F350

NOTA: TODOS LOS LUGARES DEBEN DE ESTAR LIMPIOS Y SECOS ANTES DE CONECTAR ABRAZADERAS.

1. Para comensar ponga las ruedas en posición derecha al frente.
2. Ponga el estabilizador "A" dentro del armazon o cuadro como se aprecia en la figura, luego ponga la correa o apretador afuera del armazon or cuadro, ensequida instale los tornillos en la correa y el abrazador "A". Asegurelos con las rondanas de Candado y bolas de tornillo.
3. Conecte ambos: el piston y la orilla de la varilla a la abrazadera "A" usando los empaques de hule que vienen.
4. Conecte el abrazador del estabilizador "B" a la varilla de connexion ,usando los tornillos en forma de "U" y rondanas de candado (sin apretarlos todavia).
5. Conecte ambos estabilizadores a el abrazador "B" como se aprecia en la figura - use los empaques que vienen en la bolsa.
6. Estire la varilla del piston 4 1/2 pulgadas y despues mueva la abrazadera para obtener mayor locacion y apriete todos los tornillos en forma de "U".
7. Mueva las ruedas todo a la izquierda y derecha para que no haya ninguna interferencia y estar seguro que los altos de las ruedas hagan buen contacto.
8. Recheque todos los tornillos y bolas antes de entregarse la nueva instalacion.

CAJA DE CONTENIDIO

2 - Cilindro estabilizador
 1 - Correa o apretado de montage
 1 - Abrazadera de montaje (cuadro)
 1 - Abrazadera de montaje (varilla)
 1 - Hoja de instrucciones para instalar

BOLSA DE CONTENIDO NO. 1

4 - empaques de hule
 4 - rondanas de tasa
 2 - rondanas de candado 3/8
 2 - tuercas especiales hex duras 3/8-24
 2 - tuercas dobles 3/8-24
 2 - tornillos de cabeza hex duras
 3 1/2" pulgadas
 2 - tornillos de cabeza hex duras
 4 1/4" pulgadas
 2 - tuercas especiales hex duras 3/8-16

BOLSA DE CONTENIDO NO. 2

4 - empaques de hule
 4 - rondanas de tasa
 2 - tuercas especiales hex duras 3/8-24
 2 - tuercas dobles 3/8-24
 6 - tuercas planas de candado
 5/16-18
 3 - tornillos en forma de "U" 1 1/8"
 pulgadas
 3 - tornillos en forma de "U" 1"
 pulgadas

PRECAUCION: Cualquiera y todas las garantías que se incluyen pero no limitada a cualquier garantía escrita, la garantía implícita de mercancía, o la garantía implícita de aptitud para un propósito particular no aplicará a cualquier producto alterado de forma alguna fuera de las promesas del fabricante o a cualquier producto que no se instala de acuerdo con las instrucciones escritas hecho por el fabricante de la instalación del producto.