DK211 Rhino-Rack VA, Aero, Euro & HD crossbar instruction
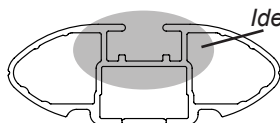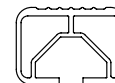
IDENTIFICATION CHART
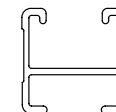
Identification
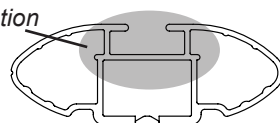
VA crossbar   **AERO crossbar**   **EURO crossbar**   **HD crossbar**

			FRONT CROSSBAR						REAR CROSSBAR				
Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side (VA)	Measurement strip length per side (AERO/EURO)	Measurement Distance (x) (HD)	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side (VA)	Measurement strip length per side (AERO/EURO)	Measurement Distance (x) (HD)	Foot plate arrow direction
Infiniti G 4dr sedan	2007-13	1180mm	M506 SUB0176 / Arrow OUT	M505 SUB0176	184mm	129mm	936mm / 36,27/32"	OUT	M505 SUB0151 / Arrow OUT	M506 SUB0151	171mm	116mm	910mm / 35,53/64"	OUT

**Measurement A**: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

Placement of pads:

Pad M505, FRONT Left of vehicle, Arrow facing outward.
Pad M506, FRONT Right of vehicle, Arrow facing outward.
Pad M505, REAR Right of vehicle, Arrow facing outward.
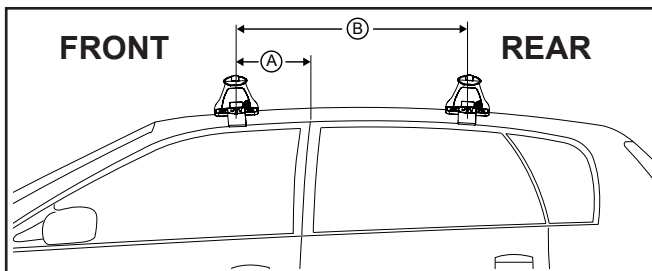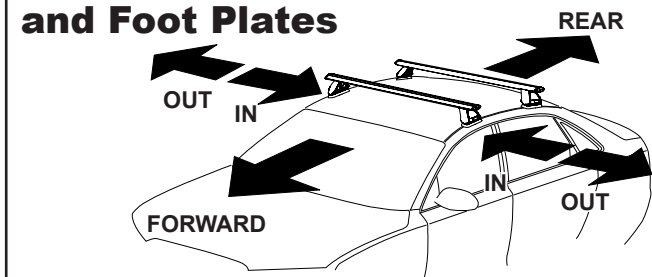Pad M506, REAR Left of vehicle, Arrow facing outward.

M506
FRONT
M505
M505
M506
REAR
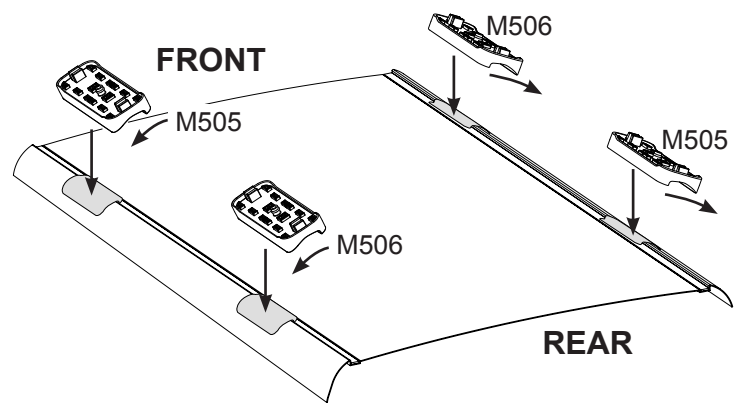
Pad orientation:

Arrows on all pads face to outside of vehicle when installed.
(*Underside of pads shown*).

FL
Front
Left

FR
Front
Right

RL
Rear
Left

RR
Rear
Right
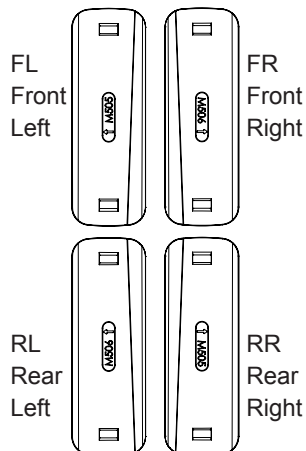
Direction of Pad, Arrow and Foot Plates

REAR
OUT
IN
FORWARD
IN
OUT

FRONT
Ⓐ Ⓑ
REAR

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Infiniti G 4dr sedan	2007-13	210mm / 8,17/64"	670mm / 26,3/8"	60kg / 132lbs