


## **Installation Instructions for 15485**

### **Vortec Throttle Body Spacer**

For 2005-2007 Chevy 4.8L, 5.3 L & 5.0L, 1999-2006 Silverado/Sierra 4.8L, 5.3L, 6.0L, 2004 Pontiac GTO 5.7L

#### **Installation Instructions:**

1. With engine off remove air cleaner assembly from top of throttle body unit.
2. Using a 10mm socket remove mounting nuts from the front side of throttle body. Remove wire connectors. Now remove throttle body. Leave O-ring gasket on intake if mileage is under 70,000.
3. Remove the 3 throttle body studs from intake.
4. Install Vortec Spacer on intake, a gasket then throttle body unit. Bolt down with three 6mm x 50mm bolts & washers. Torque to 6 ft. lbs.
5. Install wire connectors.
6. Reinstall air cleaner housing.
7. Start engine and let idle for a couple minutes. Then go drive!

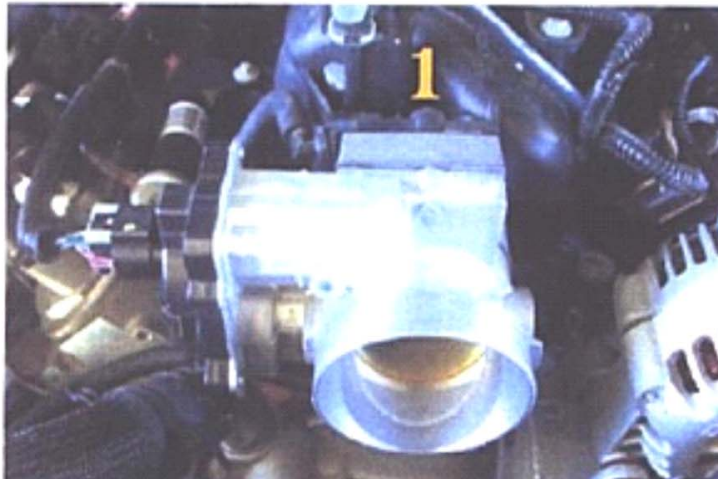

**1 Throttle  
Body Spacer**