


Installation Instructions for 52230 & 52231 Vented AN Breather Fitting

Installation Instructions:

1. Locate and drill hole for fitting:
 - Drill 7/8" hole for 555-52230
 - Drill 1" hole for 555-52231



2. Make sure o-ring is seated on fitting and install in valve cover or mounting area.

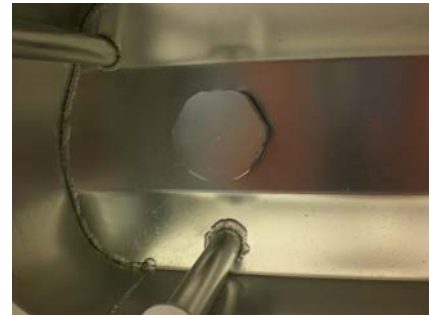

3. Insert set screw in nut and tighten nut onto fitting. After fitting is secured, tighten set screw. It is also recommended to put a thread locker such as JEGS 555-28080 on set screw.

