



Installation Instructions for 57002 2010-11 Camaro SS Cold Air Intake

PARTS LIST					
1	Filter Box	1	4" x 3" Sleeve	1	3/8" x 17" Breather Hose
1	Filter Box Adapter	4	1/4"-20 Bolts	1	MAF Sensor Gasket
1	Air Duct	6	1/4" Washers	2	SS 4mm x 10mm Bolts
1	Ram Filter w/Clamp	3	1/4" Lock Washers	1	Bracket
2	# 064 Clamps	1	1/4"-20 Nut	1	JEGS Equipped Emblem
2	# 072 Clamps	2	1/4"-20 Nylon Lock Nuts		
1	4-1/2" x 3" Hump Hose	1	1/2" NPT Straight Fittings		

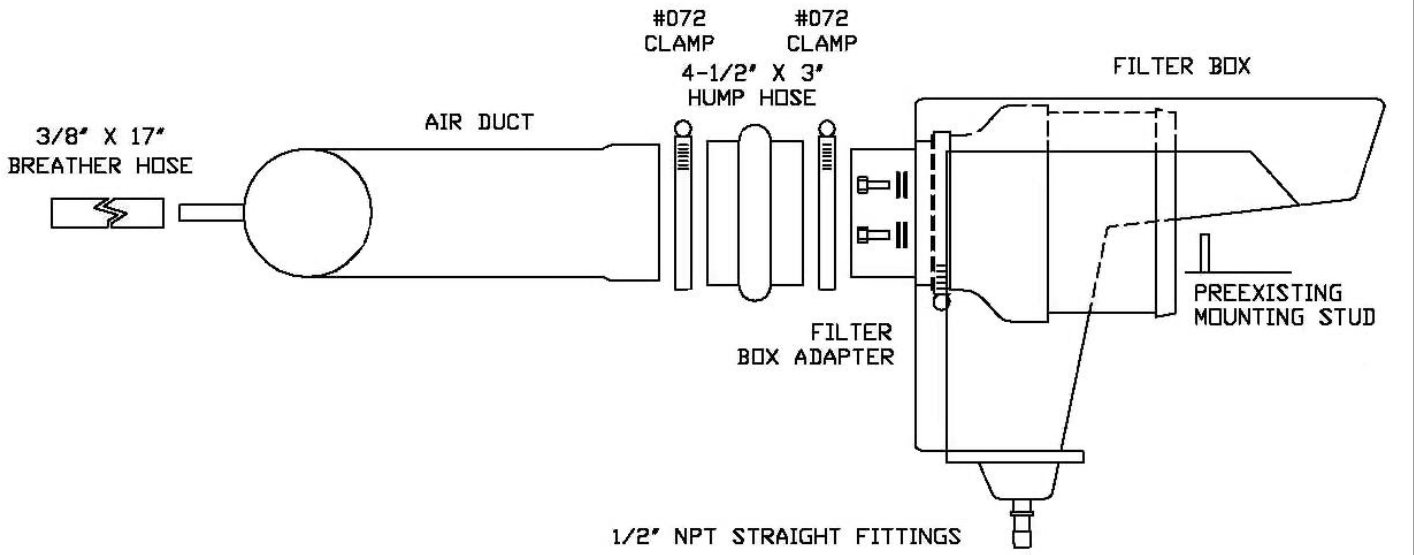

SIDE VIEW

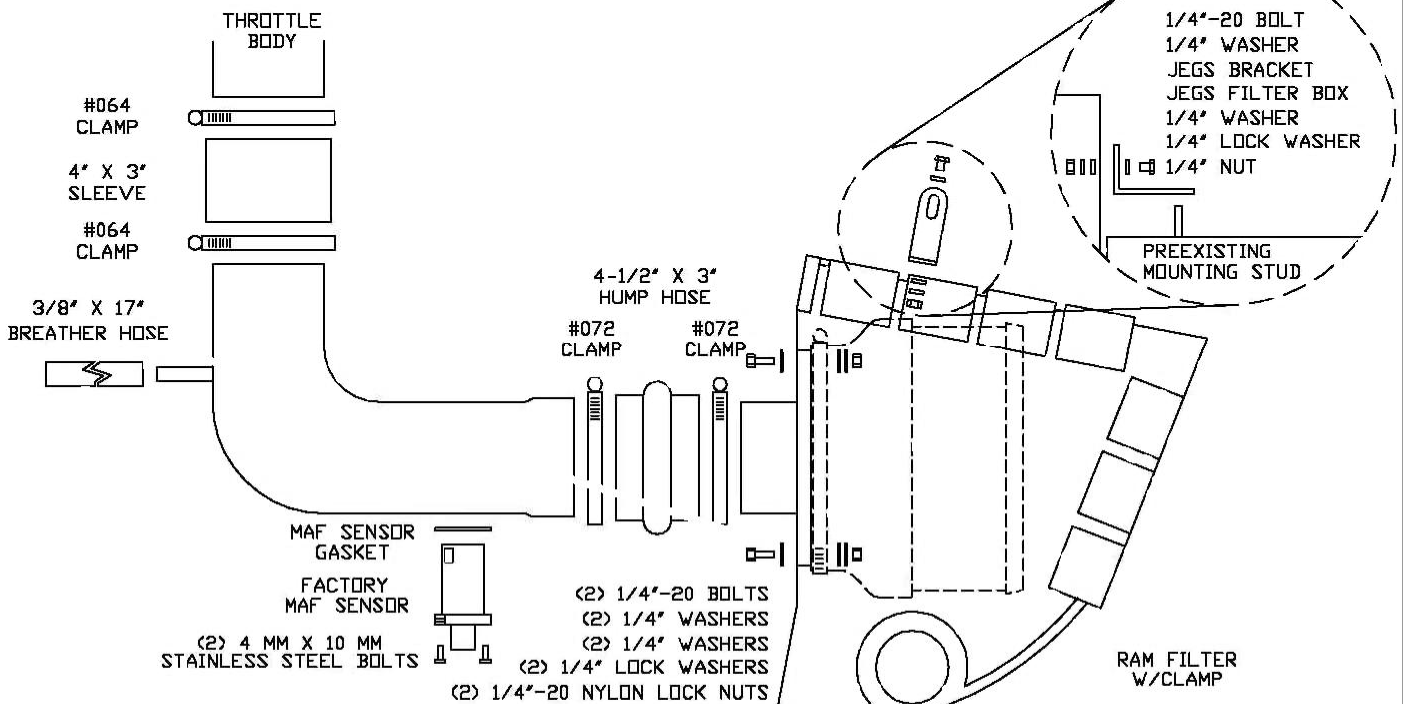

TOP VIEW