


Installation Instructions for 100813 2 Port Holley/Mallory/Quick Fuel Regulator to Edelbrock/AFB Carb

Kit Includes:

- (1) 100516 5/8" - 20 x #6 Banjo Hose End
- (1) 100911 6' x #6 Hose
- (1) 41010 0-15PSI Gauge
- (1) 100021 90° Hose End #6
- (1) 100524 3/8" NPT x #6 Fuel Pressure Gauge Adapter
- (1) 100403 3/8" NPT Pipe Plug

(Carb not included)

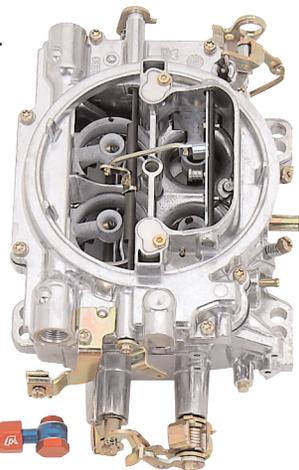

100516
5/8" - 20 x #6 Banjo Hose End

100911 6' x #6 Hose
(cut to fit)

Illustration shows a typical inner fenderwell mounting position for the regulator.

41010
0-15 PSI
Gauge

(Regulator
not included)

100403
3/8" NPT
Pipe Plug



100524
3/8" NPT x #6 Fuel
Pressure Gauge Adapter

100021
90° Hose End #6