


Installation Instructions for 70020 Window Net Kit

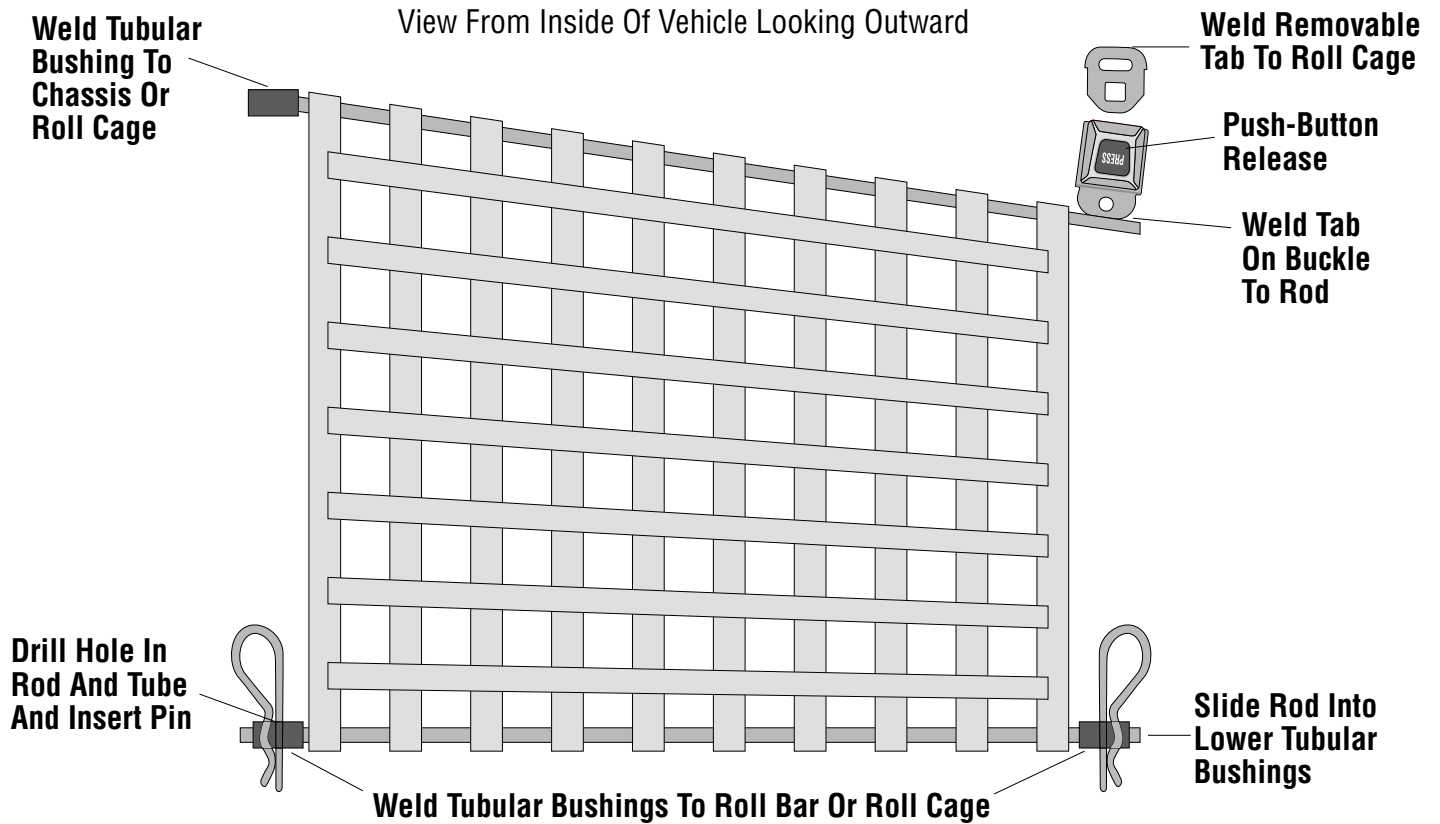

Parts Included in Kit:

- 2 Rods 7/16" x 28-1/2"
- 3 Tubular Bushings 3/4" x 1" w/.480" I.D. Hole
- 3 Hair Pin Style Cotter
- 1 Buckle