

Installation Instructions for 70805 Aluminum Dash End Panels

Note: These aluminum dash ends are designed to fit JEGS aluminum dash 555-70800; but are adaptable to other installations.

Installation Instructions:

The dash and the ends should be fit in the car at the same time if possible. Trim the forward edge as necessary and the ends of the dash itself to allow the ends to stick out 1/2" per end (Figure 1).

Trim the forward part of the dash ends that will be hidden by the body post.

Position the ends so that the corners will be covered by the dash.

Rivet the ends to the dash at the locations shown (Figure 2). Start with the two upper corner rivets.

These aluminum parts can be cleaned with very fine steel wool or polished.



Figure 1

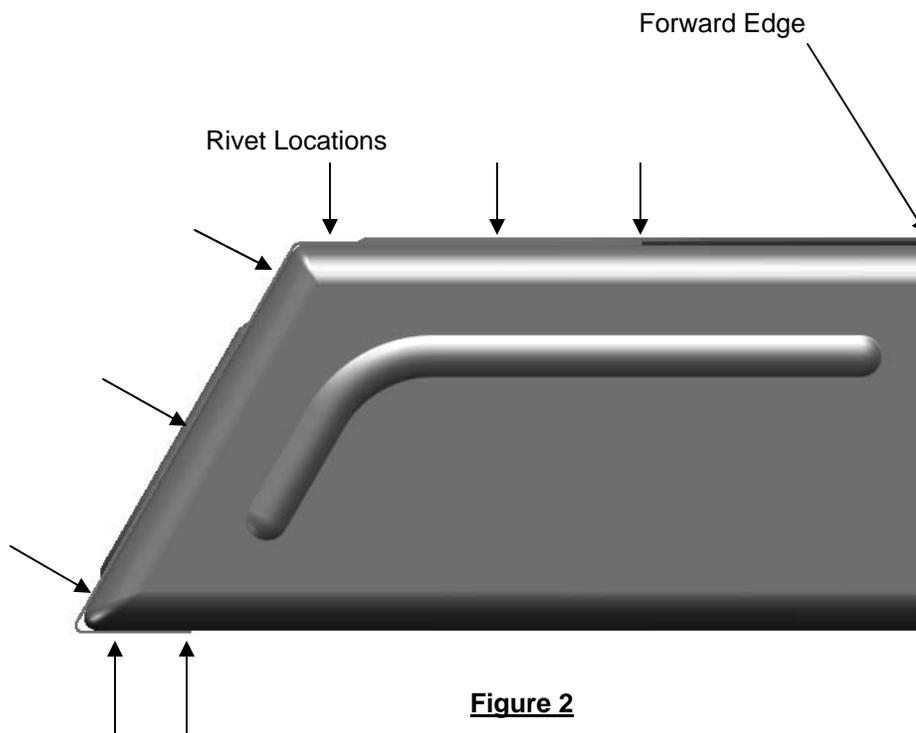


Figure 2