


Firing Order
Ford Small Block 351W

FORD SB WINDSOR (351W)

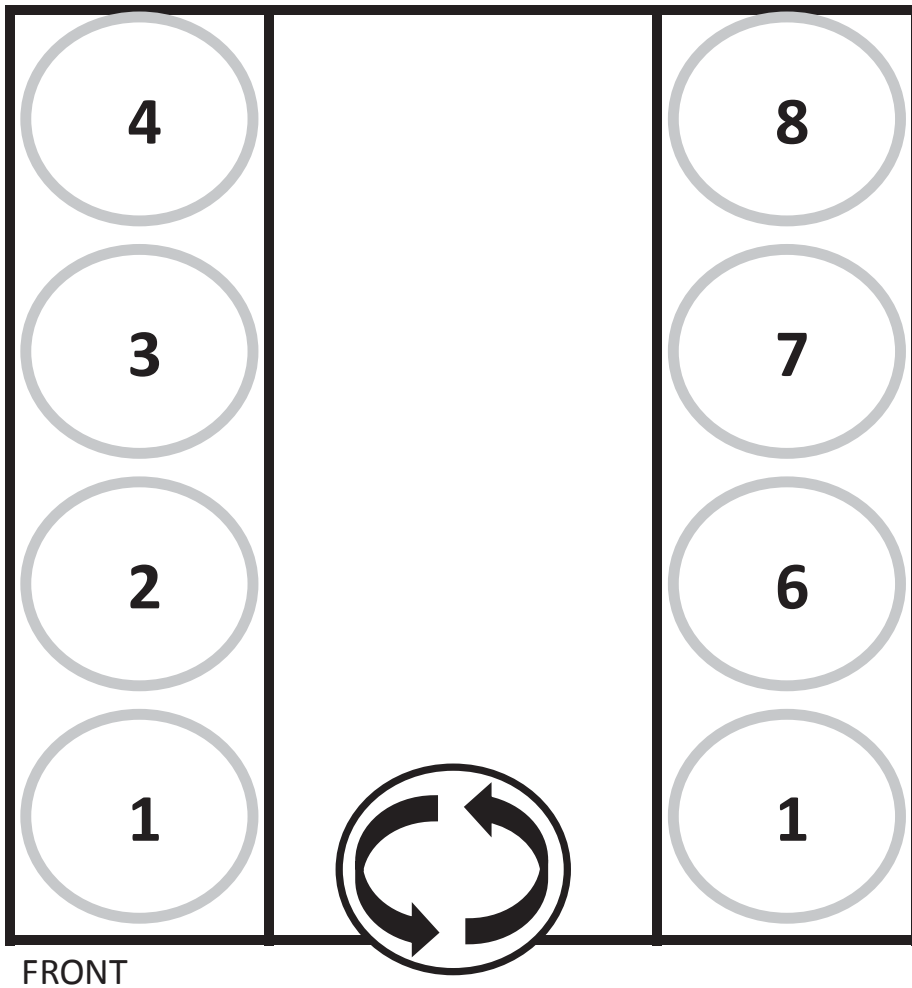

1 - 3 - 7 - 2 - 6 - 5 - 4 - 8