



To measure axle offset: Measure from the front of the axle flange to the face of the axle housing flange

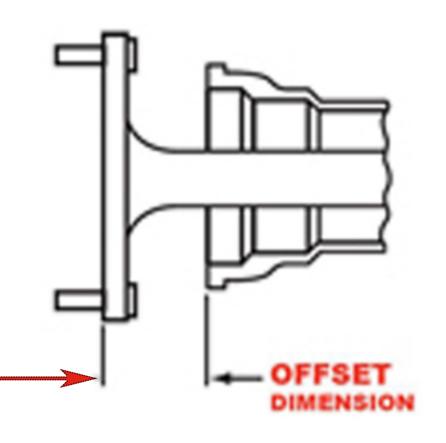

AXLE FLANGE CROSS-SECTION

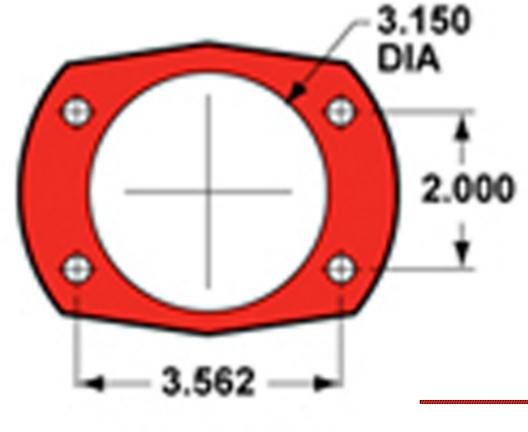

To measure rear end housing flange:

Measure from center to center of the bolt holes both horizontally and vertically

BIG FORD (NEW STYLE)