


## Installation Instructions for 62350 CO2 Shifter Kit for the B&M Pro Bandit

**BE CAREFUL – DO NOT OVERTIGHTEN THE THREADED FITTINGS!** Use a liquid Teflon thread sealing compound to avoid leaks and to guard against galling of threads.

### WIRING FOR TIMERS OR RPM SWITCHES SUPPLYING “NORMALLY OPEN GROUND”

#### ADJUSTMENT:

Air / CO2 pressure should be set between 60 and 100 lbs. not to exceed 125 lbs.

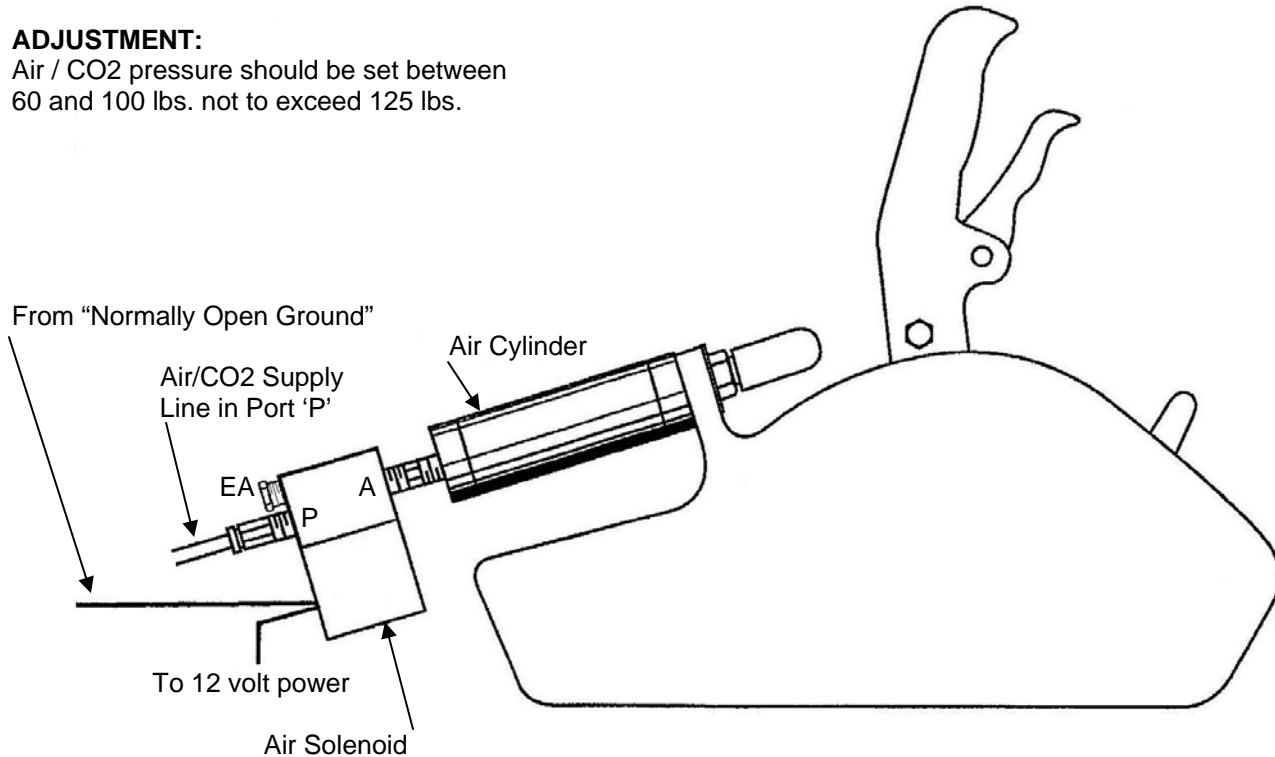

### WIRING FOR TIMERS OR RPM SWITCHES SUPPLYING “NORMALLY OPEN +12V HOT”

