



350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com

Part # 11399100
S-10 Front MuscleBar

Components:

- 1 11399101 Sway bar kit (Includes the following)
 - 2 Polyurethane frame bushing
 - 2 Frame bushing strap
 - 4 10mm x 1.5mm x 30mm flange bolt
- 4 90000924 10mm end link
- 8 90000717 Small T-bushing
- 2 90001092 Tube of Lithium grease

Hardware:

- 4 99112002 10mm x 1.5 Nylok nut PosiLink
- 2 99115001 10mm x 1.5 x 36mm stud (use Loctite)



MUSCLEbar™

by Air Ride Technologies

Installation Instructions


*****This sway bar is designed for use with our front StrongArms*****



1. Apply lithium grease to the poly bushings and slide them over the sway bar.

2. Slide the bushing strap over the bushing. Bolt the sway bar to the frame using the 10mm x 30mm bolts supplied.

Note: Some trucks did not come with a factory sway bar. In this case the holes may need to be drilled and tapped.

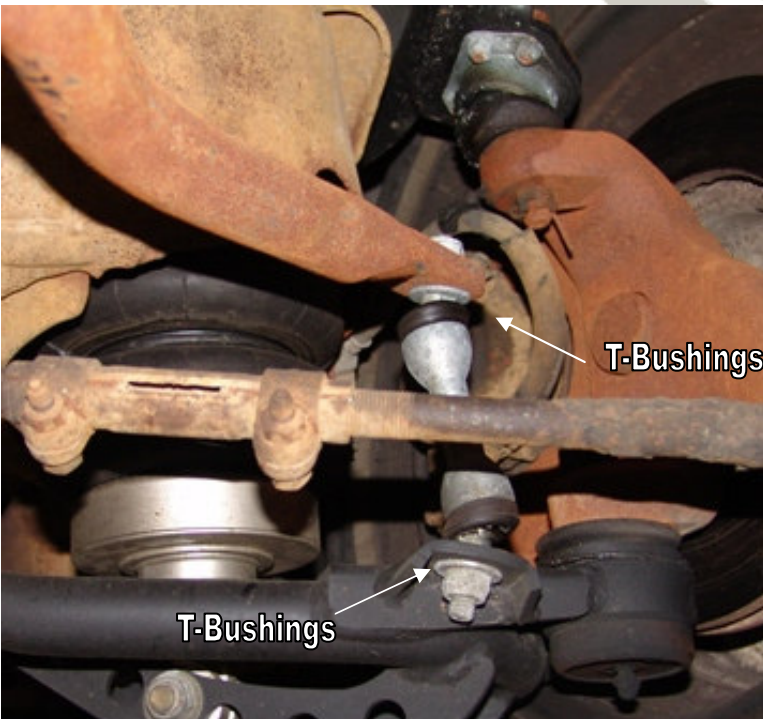

3. Bolt the PosiLinks to the sway bar and lower control arm. The holes in the arm and bar are larger than the PosiLink studs, so T-bushing are supplied and must be installed on the top and bottom of the bar and the control arm tabs.

4. Check sway bar clearance through full suspension travel and from lock to lock.

Make sure that the PosiLinks do not bind.