

FITS: 2018-UP JEEP WRANGLER JL
ENGINE SIZE: 3.6L
CAB SIZE: 2DR/ 4DR

- ALLOW VEHICLE TO COOL DOWN BEFORE WORKING ON ANY ENGINE / EXHAUST COMPONENTS.
- REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.
- READ INSTALLATION INSTRUCTIONS COMPLETELY BEFORE BEGINNING REMOVAL AND INSTALLATION
- LIMITED LIFETIME WARRANTY



60-120 min



Cutting May be Required



PPE Kit Recommended



support@trailfx.com



1 866 638 4870

REMOVAL:

1. Allow plenty of time for your vehicle to cool down prior to starting. Exhaust reach high temperatures and may cause serious burns. Always wear appropriate safety equipment including goggles and gloves.
2. Read instructions prior to installation. Use a penetrating lubricant and spray the exhaust clamp nut above the rear axle and along with both isolation rubber mounts before removal and re-installation.
3. Use a vehicle hoist to raise vehicle to proper working height. If a vehicle hoist is not available, raise the vehicle and securely support using jack stands. Use of a jack or stand to support the muffler when removing or installing is recommended.
4. Release factory band clamp above the axle at the muffler inlet pipe. (Image 1)
5. With a stand or helper supporting the muffler assembly, find both the left and right mounts supporting the muffler assembly. Use a 13MM wrench to remove the lower bolt on both mounts and with a 13MM extension socket remove the upper left and right bolts. Carefully remove muffler assembly from the inlet pipe and lower to the ground.



IMAGE 1



FITS: 2018-UP JEEP WRANGLER JL
ENGINE SIZE: 3.6L
CAB SIZE: 2DR/ 4DR

INSTALLATION:

1. Slide provided exhaust clamp onto the muffler inlet and install the left and right OEM factory mounts onto the MaxFlow Xtreme muffler hangers.
2. Use a stand or helper to hold the muffler in place while placing the muffler assembly into position and sliding the muffler inlet onto the factory inlet pipe above the rear axle. Be sure to line up notch on the inlet pipe with the tab on the OEM inlet pipe.
3. Install the black powder coated exhaust tips on the exit pipes of the muffler and tighten both integrated clamps loosely to allow for possible adjustment. (IMAGE 2)
4. Make all necessary adjustments for the muffler and tips for proper clearance and looks. Fully tighten each clamp until connections are secure.


**IMAGE 2****IMAGE 3**



PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Muffler Assembly (#1)		
1	2 1/2" Exhaust Clamp (#2)		
2	Exhaust Tips (#3)		

PARTS DIAGRAM

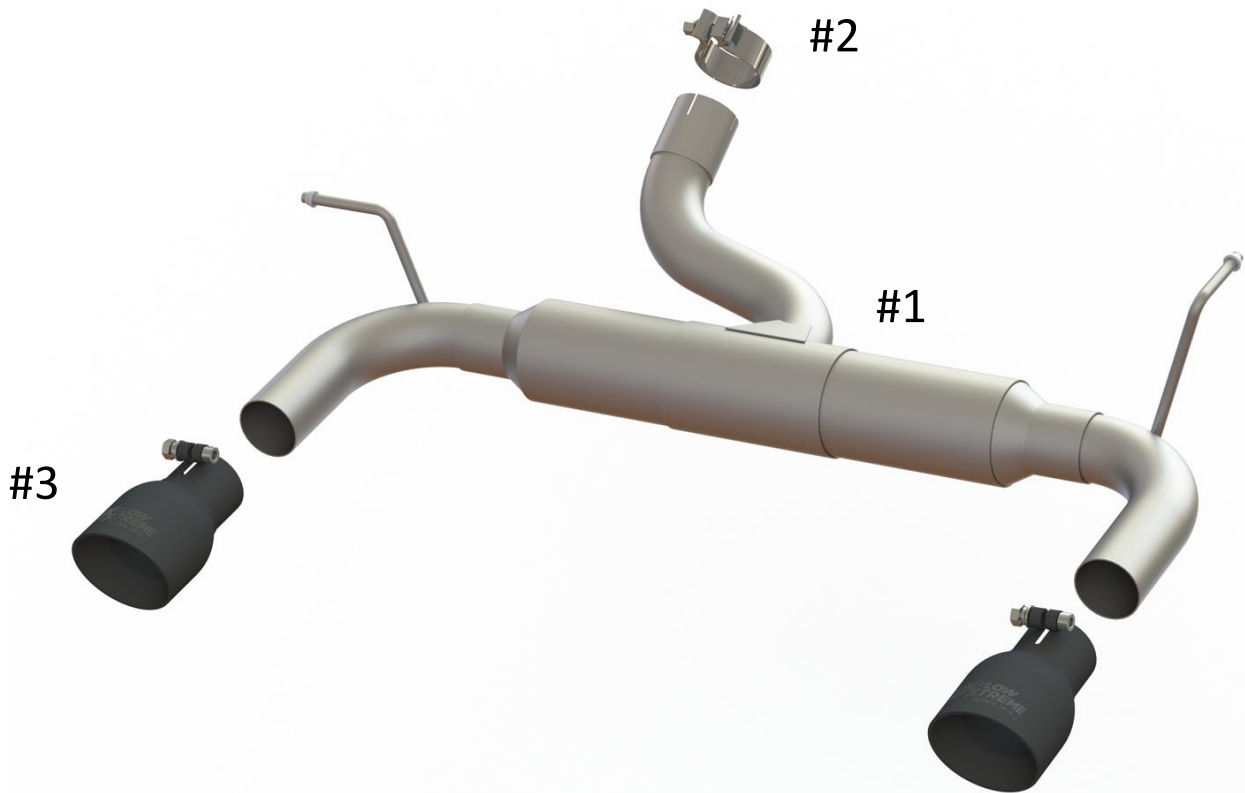

Keystone Automotive Operations (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.