




Part # TABT4046

1988-98 GM / Chevrolet Full-Size Std Cab Truck
Full Insulation and Sound Dampening Kit

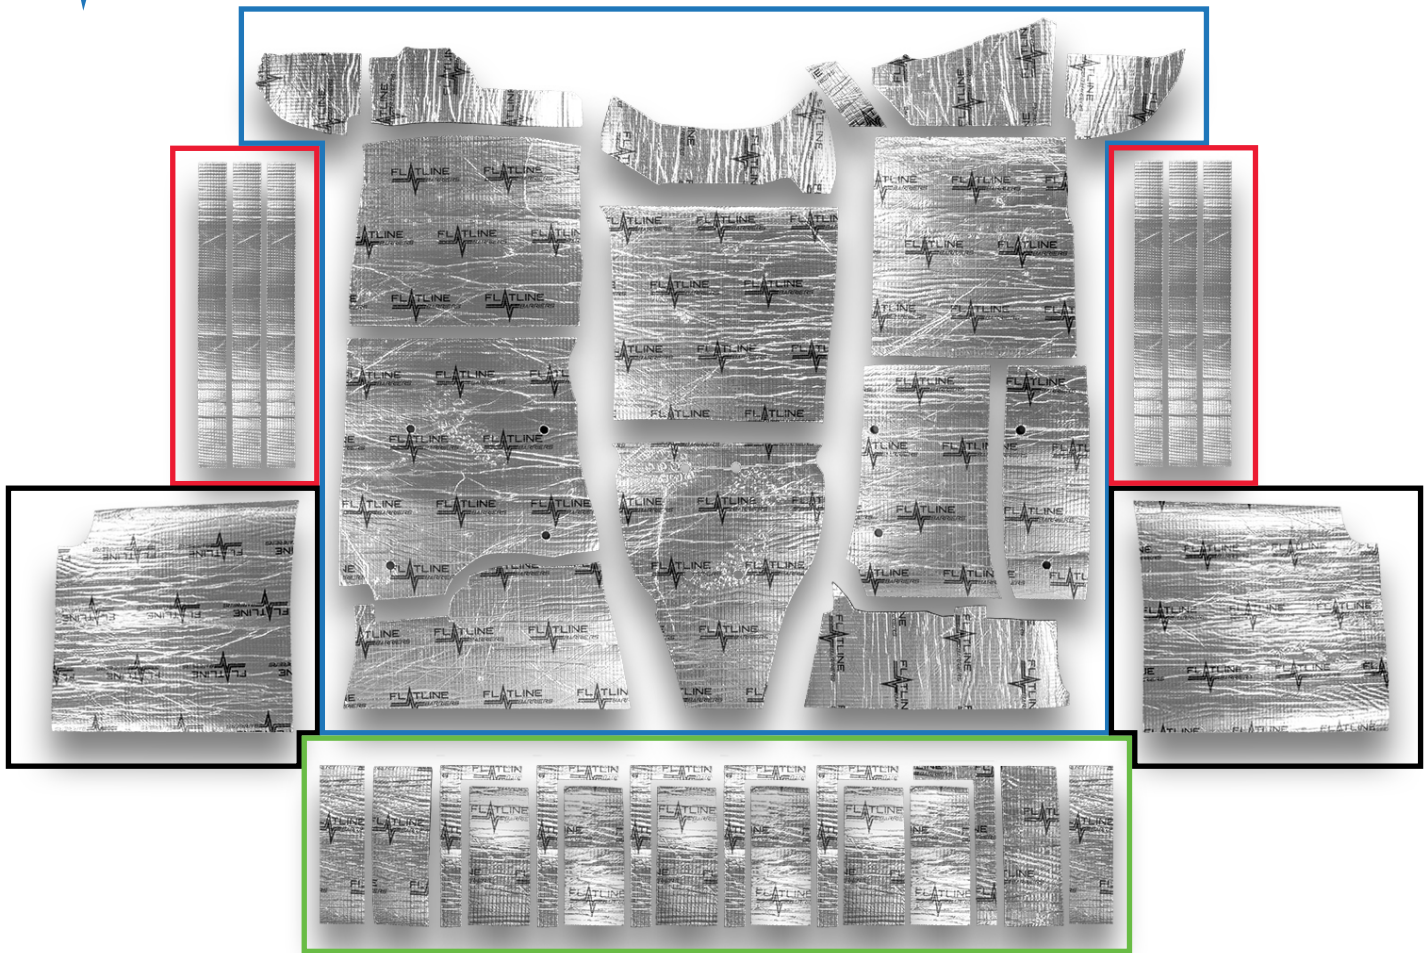

TABT4045 - 1998-88 GM / Chevrolet Full-Size Std Cab Truck Roof Insulation and Sound Dampening Kit

TABT4044 - 1998-88 GM / Chevrolet Full-Size Std Cab Truck Cab Wall Insulation and Sound Dampening Kit

TABT4043 - 1998-88 GM / Chevrolet Full-Size Std Cab Truck Door Insulation and Sound Dampening Kit

TABT4042 - 1998-88 GM / Chevrolet Full-Size Std Cab Truck Floor Insulation and Sound Dampening Kit

Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.