




Part # TABV7018

1976-82 Chevrolet Corvette Coupe w/ Metal Floor
Full Insulation and Sound Dampening Kit

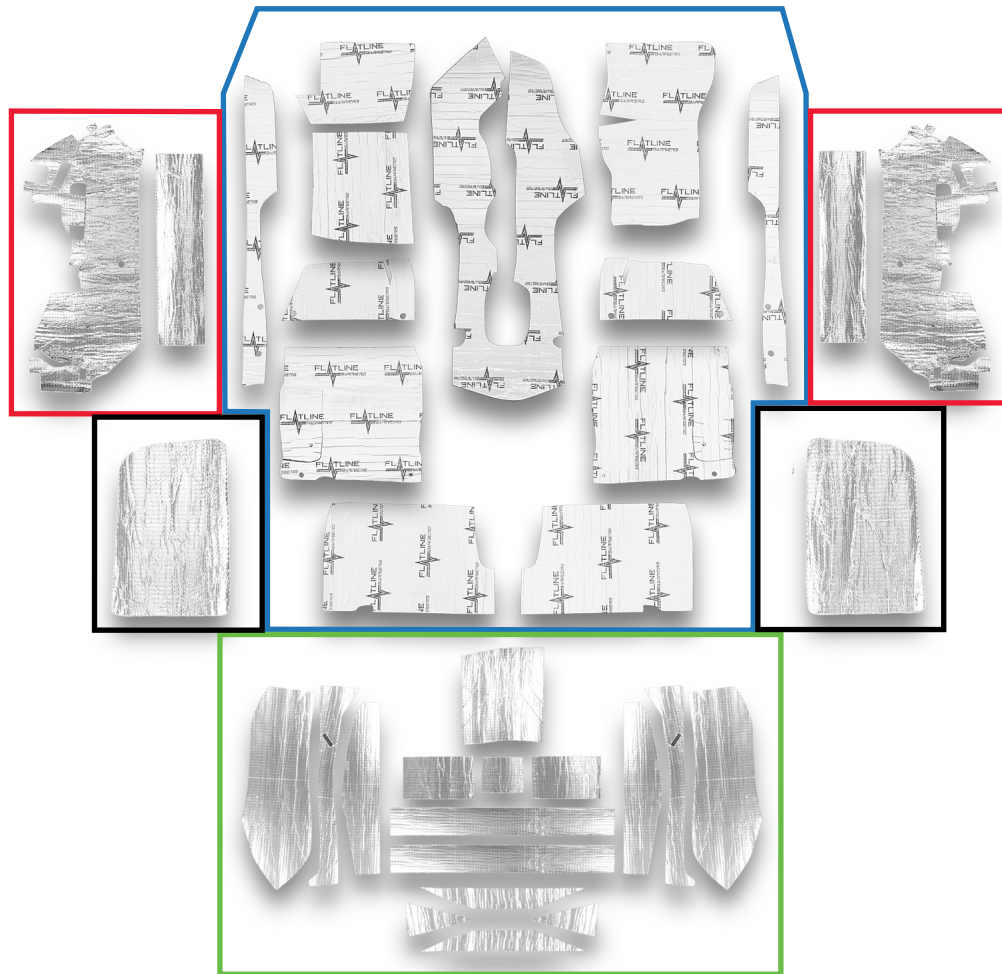

TABV7012 - 1968-82 Chevrolet Corvette T-Top Insulation and Sound Dampening Kit

TABV7016 - 1968-82 Chevrolet Corvette Cargo Insulation and Sound Dampening Kit

TABV7015 - 1968-82 Chevrolet Corvette Door Insulation and Sound Dampening Kit

TABV7014 - 1976-82 Chevrolet Corvette Coupe w/ Metal Floor Insulation and Sound Dampening Kit

Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.