



PONTIAC G8 REAR SWAY BAR INSTALLATION


SB013 – 2008-PRESENT PONTIAC G8

RECOMMENDED TOOLS:

- 15mm wrench
- 13mm socket
- 3/8" drive ratchet

INSTALLATION:

1. Lift vehicle and support safely under frame rails.
2. Using a 15mm wrench, loosen the center exhaust hanger and pull the hanger off the mounting stud. This will allow the exhaust to drop slightly and provide enough room to remove the sway bar. **(IMAGE 1)**
3. Using a 4mm Allen wrench and a 15mm wrench, remove the nuts from the sway bar end links. **NOTE: the Allen wrench is only necessary to prevent the center stud of the end link tie rod from spinning while removing the nut. (IMAGE 2)**
4. Using a 13mm socket, remove the bolts that hold the sway bar to the rear suspension cradle. **(IMAGE 3)**
5. Remove the sway bar.
6. Remove the OE sway bar brackets from the stock sway bar and install them onto the BMR sway bar as shown in **IMAGE 4**.
7. Position the BMR sway bar into place and thread the factory mounting bolts into place. Tighten.
8. Insert the end links into the sway bar and tighten both nuts.
9. Re-install the exhaust hanger over the mounting stud. Tighten mounting nut.
10. Lower vehicle.

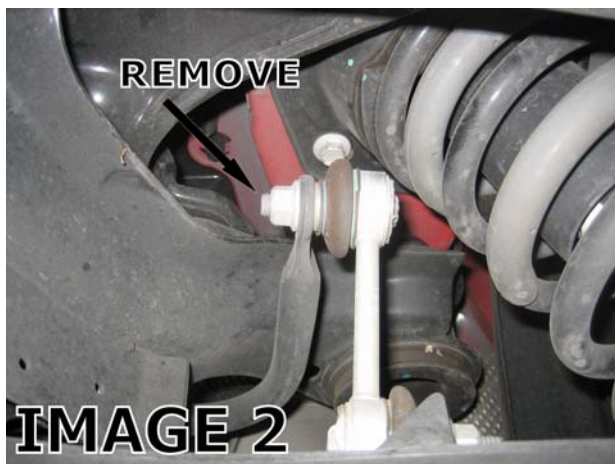

WWW.BMRFABRICATION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.