



PRIOR TO INSTALLATION

- A) Bushwacker®** only approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Custom Paint Job:** Please test fit all the flares first to ensure you have the correct flares for your vehicle. We are not responsible for any costs you may incur if you did not confirm the flares before having it painted. We recommend hiring professionals to custom paint the products. It is also ideal to have the painting done prior to the installation to eliminate any over-spraying issues.
- C) Remove existing fender flares.** (Skip this step if you don't have existing fender flares.)
Remove all the screws and fasteners currently holding the existing flare to the vehicle. Write down and save all the screws you have removed for re-use with the fender flares. If certain areas of the existing flares are held on with double sided tape, you will have to pry your existing flare off. Please do so carefully to avoid damage to your vehicle body.
- D) Test Fitting:** Hold each and every flare up to the fender. Make sure you align the flare to the contour of the body, and the mounting holes lineup to the existing mounting holes on the inner fender lip (if applicable). Don't worry if not all the holes line up, as some holes are meant to be used with different installation hardware that is provided. The flares may not be sitting flush at this time, our flares are designed to flex into the bodyline when you actually install them using the provided and existing hardware. At any time, do not drill or modify the fender flare in anyway, as you will void your warranty.
- E) Remove other existing parts.**
Some vehicles may require the removal of existing parts that will interfere with the installation. Common item would be mud flaps; however by using fender flares, they act as another form of mud deflector. If you are not confident in doing so, this will be a good time to take your vehicle to a professional for the installation. Save existing screws and fasteners from the vehicle.
- F) Cleaning the vehicle.**
Make sure to wash your vehicle, especially the area the fender flares will be mounted to including the inner fender lip. Any dirt or debris that has not been cleaned or removed can potentially cause the improper fitment of the fender flare. If you are covering existing rust, we recommend sanding down the rust and primer over to prevent further deterioration of the metal in the fender. Make sure the vehicle is dry before the installation. The fender flares come ready to be installed, however if you need to clean them, please use a mild detergent to wash and then dry completely.

Forge™ Fender Flares Set of 4

Set Part #48146-08

I-Sheet #IBAF-146

Rev-0 03/23/2021

For complete fitment info visit : www.bushwacker.com

TOOLS FOR EASY INSTALLATION:

- Razor Blade
- Hex Key 4.0 and 4.5
- Phillips Driver
- Socket Wrench w/10mm Socket
- Torx Screwdriver
- Awl
- Grease Pencil
- Pliers
- Drill

PLEASE READ: Dirt and debris can become lodged between the fender flares and the vehicle's fenders, causing scratching and paint wear from vibration. Lund International is not responsible for any damage, and the installation of our fender flares is done with the buyer's understanding that this scratching and paint wear may occur.

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.






G) For Rivet Installation:

Install the rivet screws and nuts to each of the rivet holes on the flare. Our rivets are designed to screw on to the fender flares only, and they shouldn't be touching the vehicle body at all. Using hand tools, tighten nuts until fastener is snug. **DO NOT OVERTIGHTEN** as this may damage the fender flare.


H) Installation of the Rubber Seal: Before you start cutting any rubber seal, please study the diagram. Do not use the rubber seal in any other areas other than indicated; otherwise you will end up with a shortage of rubber seal on your last flare. Start the installation of the rubber seal as indicated in the diagram. Then cut the rubber seal with a razor. Follow the same instruction for the remaining flares.

*Each roll of the rubber seal provided is long enough to complete the 4 fender flares and with extra to spare, however we are not responsible for the improper use of the rubber seal. Contact Bushwacker to purchase additional rolls of rubber seal.

Included in Hardware Kit:


- | | | | | |
|--|--|--|--|--|
| 1.  | 2.  | 3.  | 4.  | 5.  |
| Long U-Clip
14 pcs | Phillips Truss Screw
14 pcs | Black Foam Tab
14 pcs | Rubber Seal | Rivet + Nylon Nut
40 pcs |

Component List:

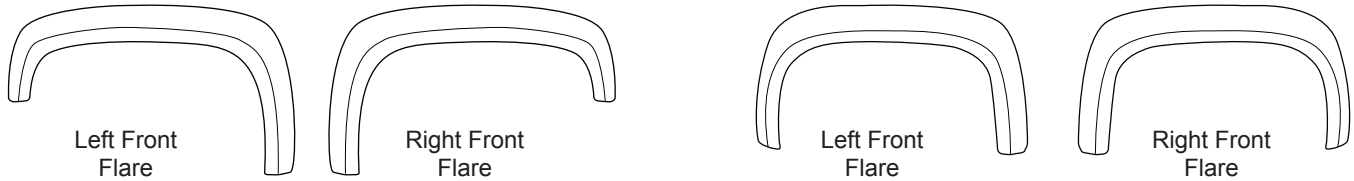

Front Flare Installation Procedures (Driver's Side):


1. Remove the front splash guard using a T-15 Torx driver and retain (1) screw for later use. NOTE: There is (1) pull-nut behind flare, which is to be discarded. Pull firmly to remove splash guard.
2. Remove (5) factory installed screws.
3. Install front flare using (5) factory screws and the (1) screw removed in Step 1.
4. Completed front flare installation. Repeat procedure for opposite side.

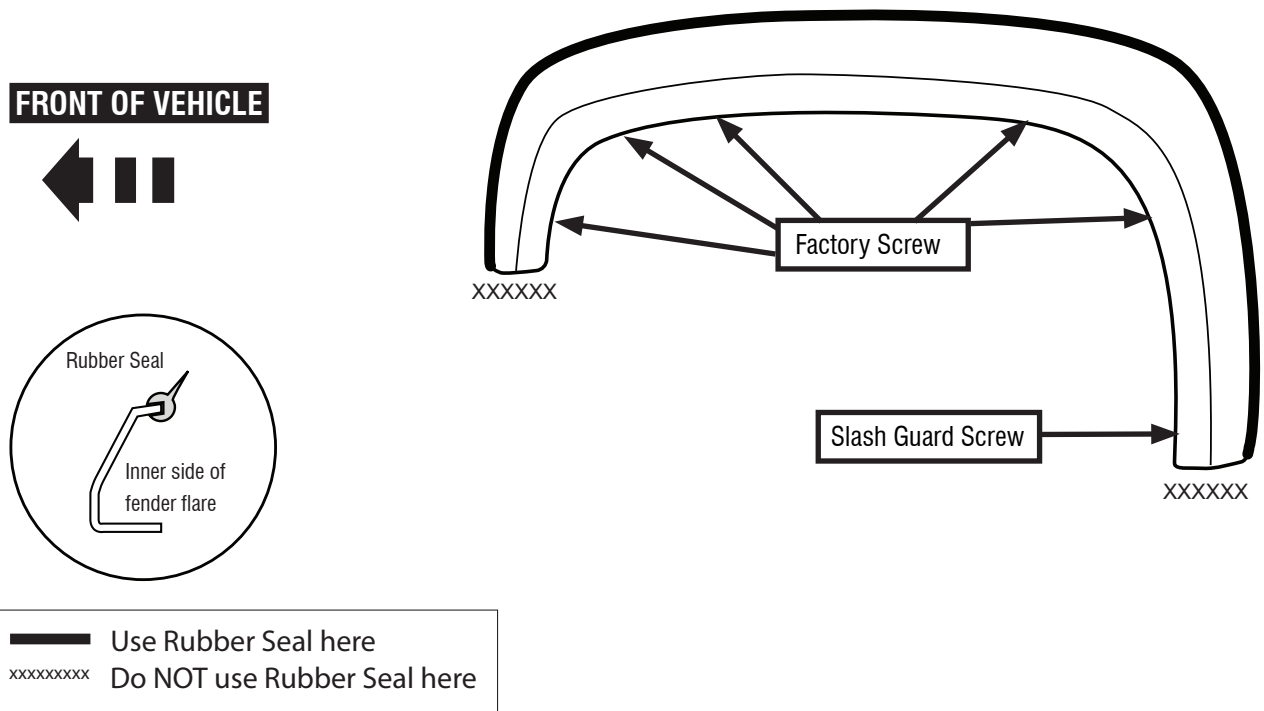


Rear Flare Installation Procedures (Driver's Side):

5. Remove the rear wheel as instructed in your user's manual. Remove the rear splash guards using a T-15 Torx driver. Retain screws for later use.
6. Loosely attach flare using (2) screws removed in previous step.
7. While holding the rear flare in place, mark the flare's (7) hole locations using a grease pencil. Remove flare after marking.
8. Install (7) MT1-0034 foam tabs around the stock fender trim where the grease pencil marks were made.
9. Install (7) CL1-0009 long "U" clips on the center of the foam tabs.
10. Loosely attach flare with factory screws removed previously.
11. Install rear flare using (7) SW1-0058 truss screws and the (2) outboard screws removed in Step 5.
12. Fully tighten all fasteners, then replace the rear wheel as instructed in your user's manual. Rear flare installation is complete. Repeat procedure for opposite side..

FRONT OF VEHICLE

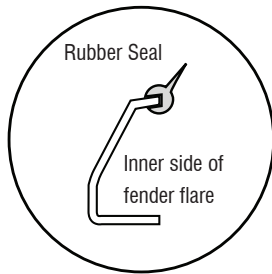


— Use Rubber Seal here
xxxxxxx Do NOT use Rubber Seal here

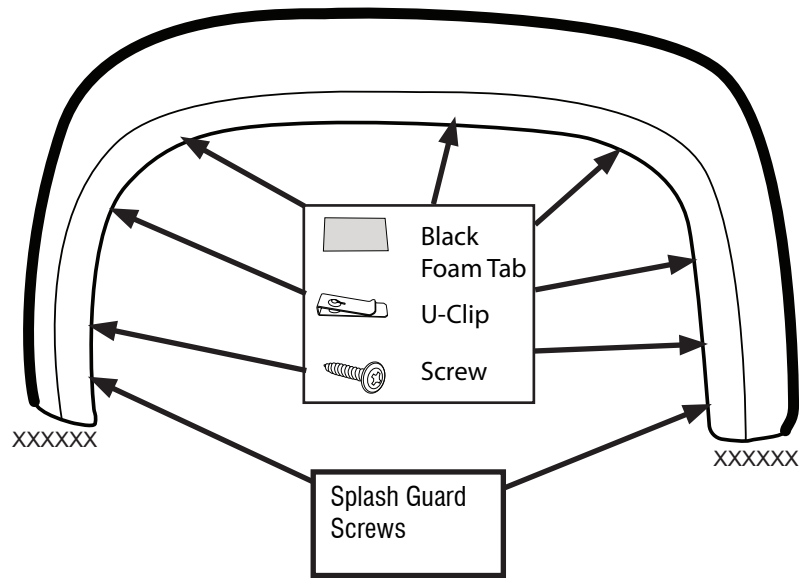

Details

U-Clip Installation

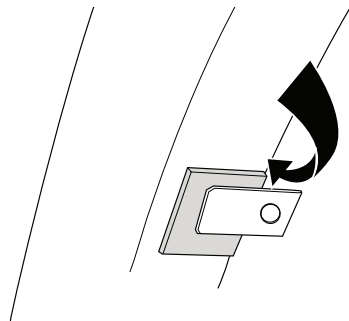

Wrap Black Foam Tab over pencil marks, then install U-Clip on top of it.

Rivet Installation

