

BORGESON

Steering You Forward

Installation Instructions For Jeeps **Part #000903, 000904, 000905, 000910, 000915, 000920**



CAUTION: NOT ALL VEHICLES CONFORM TO PUBLISHED SPECIFICATIONS! TEST FIT THIS ASSEMBLY IN YOUR TRUCK BEFORE PAINTING OR ALTERING IN ANY WAY. ONLY ASSEMBLIES IN NEW CONDITION WILL BE ACCEPTED FOR RETURN OR EXCHANGE.

REMOVAL:

1. Engage the steering column / ignition switch lock with the steering wheel & wheels centered. (**NOTE** It may be necessary to remove the upper and lower steering shaft bolts prior to locking for accessibility)
2. Remove the stock steering assembly by removing the bolts that attach it to the steering box and steering column shafts. These connections are often rusted and may require penetrating oil or a few taps with a hammer.

INSTALLATION:

3. Fully collapse the Borgeson assembly. (**NOTE** '72-'75 CJ Models include a 3/8" thick spacer to be slid over the splined shaft on the steering column prior to installation).
4. Slide the column universal joint over the splined steering column shaft to the depth shown in Figure B. A seat must be provided for the set screw as shown in Figure A. (**NOTE** The existing factory flat will not be used) Tighten the set screw to mark the shaft and then remove the universal joint to file a new flat spot on the splined shaft. Tighten the set screw into the seat and then tighten the lock nut.
5. Slide the steering box universal joint over the splined steering box input shaft by extending the telescoping shaft to the depth shown in Figure B. A seat must be provided for the set screw as shown in Figure A. (**NOTE** The existing factory flat will not be used) Tighten the set screw to mark the shaft and then remove the universal joint to file a new flat spot on the splined shaft. Tighten the set screw into the seat and then tighten the lock nut.
6. After approximately 100 miles, retighten all set screws and then lock nuts. If you wish to use a product such as Loctite, we recommend Loctite 222 for ease of removal.

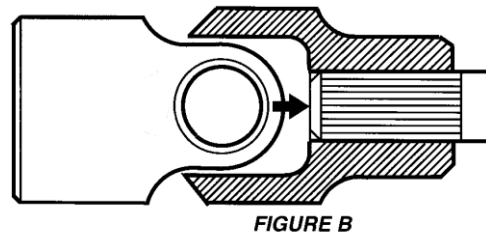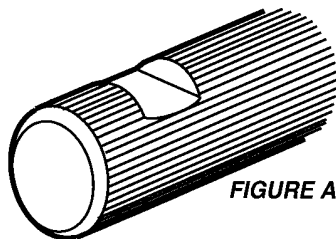

ATTENTION JEEP OWNERS

We are introducing an all new, redesigned steering column from ididit for your CJ.

- 8-Position tilt
- Ignition switch
- 4-Way flashers and horn
- Column is a direct bolt-in
- Self cancelling turn signals
- Available in, black powder coated, paintable steel, and chrome finishes.




Joseph Drogowski's 1986 CJ-7

CJ-5 and CJ-7 Columns

| Part Number | Description | |
|-------------|---|----------|
| 152080010 | '76-86 Jeep CJ-5 and 7, Steel with Ignition | \$537.60 |
| 152080020 | '76-86 Jeep CJ-5 and 7 Chrome Tilt with Ignition | \$642.60 |
| 152080051 | '76-86 Jeep CJ-7 and 7 Black Powder Coated Tilt with Ignition | \$642.60 |

{All columns come with: Dress-Up Kit, Keys with Key Code, Wheel Nut, Jumper and Plug Kit, Relay Harness and Installation Instructions}

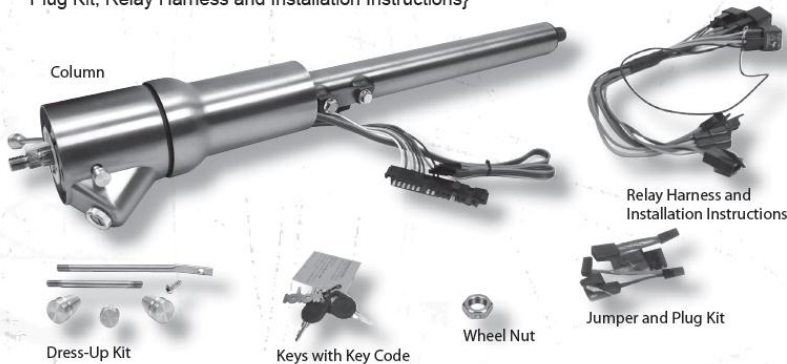

BORGESON

Steering You Forward

Borgeson Universal Company Inc.
 91 Technology Park Drive
 Torrington, CT 06790
 860.482.8283 FAX 860.496.9320
www.borgeson.com



Steering Boxes

| Part Number | Description | |
|-------------|-----------------------------|----------|
| 920010 | 525 Manual | \$333.79 |
| 800207 | New Saginaw 600; 16:1 Ratio | \$612.86 |
| 800205 | 700 Power | \$349.00 |



Replacement Steering Shafts

| Part Number | Description | |
|-------------|--|----------|
| 000905 | '76-86 CJ Manual | \$248.00 |
| 000910 | '76-86 CJ Power | \$248.00 |
| 000915 | '76-86 Manual with Vibration Reducer Upgrade | \$284.00 |
| 000920 | '76-86 CJ Power with Vibration Reducer Upgrade | \$284.00 |

