

## Exhaust System Installation for Chevrolet Corvette C5/Z06 PN-12649



These instructions have been written to help you with the installation of your Borla Performance Exhaust System. Please read this document completely before beginning the installation of your system.

Please compare the parts in the box with the bill of materials provided to assure that you have all the parts necessary for this installation.

To ensure this part number fits your specific model year, please visit our website for the latest model year listings at [www.BORLA.com](http://www.BORLA.com).

**Thank you for purchasing a Borla Performance Exhaust System.**

**Borla Performance Rear Section Exhaust Systems (PN-12649) is designed for the Chevrolet Corvette C5/Z06 coupe/convertible equipped with a 5.7L V-8 engine, automatic or manual transmissions.**

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

*Please take time to read and understand the following...*

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System.

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

**Minimum Required Tool List:**


**TOOLS:**

1. 3/8" Drive Ratchet
2. 3/8" Drive Extension 3"
3. 15mm Deep Well Socket
4. 15mm Wrench
5. 18mm Socket
6. 13mm Socket
7. 10mm Socket
8. Pry Bar

**SHOP SUPPLIES:**

- 1 Spray Lubricant

**Borla Performance Rear Section - Bill of Materials**

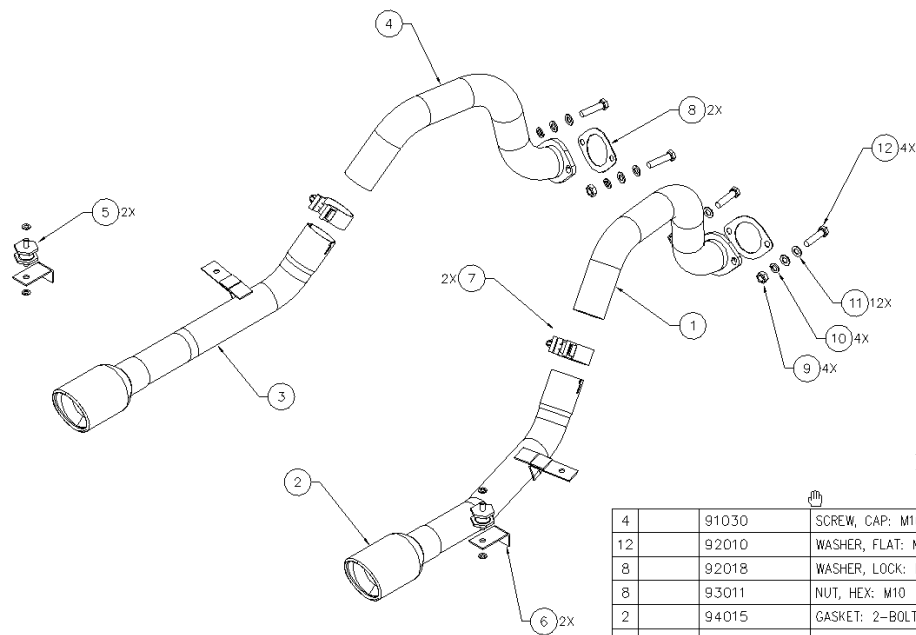

**12649**

4	91030	SCREW, CAP: M10 X 40MM		12
12	92010	WASHER, FLAT: M10		11
8	92018	WASHER, LOCK: M10		10
8	93011	NUT, HEX: M10		9
2	94015	GASKET: 2-BOLT		8
2	90113	ACCUSEAL CLAMP: #2.50		7
2	44356	BRACKET: 1.50 X .125 X 4.25" LG.		6
2	94262	RUBBER ISOLATOR MOUNT		5
1	51048	L/H OVER AXLE SECTION		4
1	51195	L/H TAIL PIPE SECTION		3
1	51196	R/H TAIL PIPE SECTION		2
1	51049	R/H OVER AXLE SECTION		1