13372

2006-2008 FORD F-150 (BUILT AFTER 8/5/2005)


COMPATIBLE WITH TOMMYGATE

11/26/2012

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 6,000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 10,000 LBS. TRAILER WEIGHT & 1,000 LBS. TONGUE WEIGHT

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

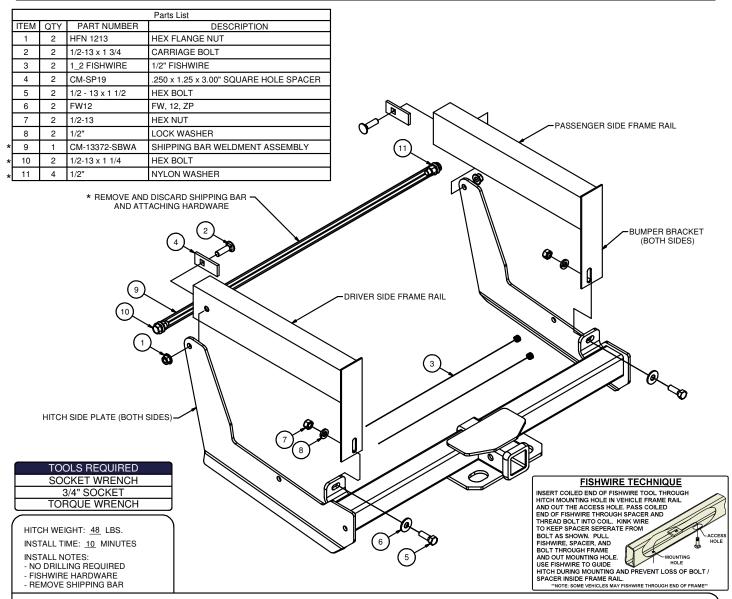

INSTALLATION STEPS

- *1. Remove and discard 1/2-13 x 1 1/4 hex bolts, nylon washers and shipping bar from hitch.*
- 2. Raise hitch into position.
- 3. Secure hitch to bumper bracket with 1/2-13 hex bolts, flat washers, hex nuts, and lock washers as shown.
- 4. Fishwire 1/2-13 carriage bolts and CM-SP19 spacers through frame rails and out hitch side plates.
- 5. Attach 1/2-13 hex flange nuts onto carriage bolts.
- 6. Torque 1/2" hardware to 110 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.