



INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D362481 (B)
09-10 FORD F-150 SUPER CAB P/U 4DR 2/4WD 6.5' BED

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PACKING LIST

QTY PART DESCRIPTION

12 3/8" X 1" CARRIAGE BOLT
12 3/8" X 1 1/4" HEX BOLT
36 3/8" FLAT WASHER
24 3/8" LOCK WASHER



QTY PART DESCRIPTION

24 3/8" HEX NUT
6 F04 FRONT & REAR BRACKET
1 D362481D DRIVER SIDE STEP
1 D362481P PASSENGER SIDE STEP

INSTALLATION INSTRUCTIONS



READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

STEP 1. THIS INSTALLATION USES (3) MOUNTING BRACKETS PER SIDE. BEGIN BY INSTALLING THE SIDE STEP MOUNTING BRACKETS ON THE PASSENGER SIDE OF THE VEHICLE. LOCATE THE HOLES IN THE BODY PINCH MOLD AT THE FRONT, CENTER AND REAR OF THE CAB. **PHOTO #1**

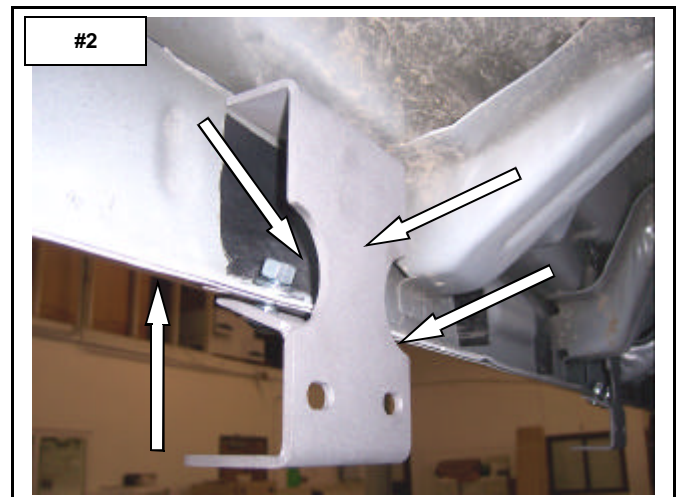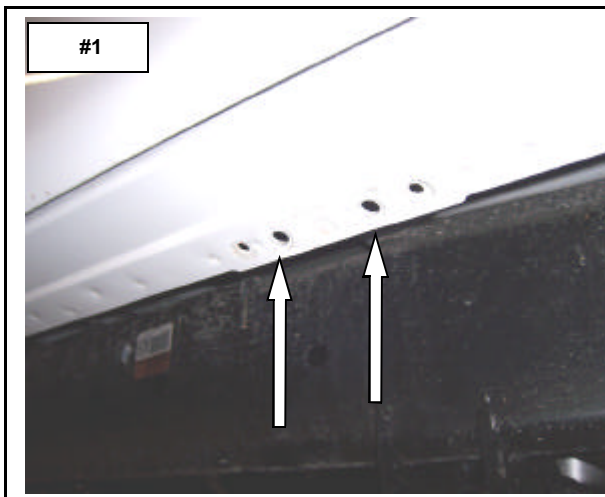

STEP 2. ATTACH EACH OF THE MOUNTING BRACKETS TO THE PINCH MOLD USING (2) 3/8" X 1" CARRIAGE BOLTS, (2) FLAT WASHERS, (2) LOCK WASHER AND (2) HEX NUTS. HAND

STEP 3. ATTACH THE PASSENGER SIDE STEP TO EACH OF THE MOUNTING BRACKETS USING (2) 3/8" X 1 1/4" HEX BOLTS, (4) FLAT WASHERS, (2) LOCK WASHERS AND (2) HEX NUTS. **PHOTO #4**

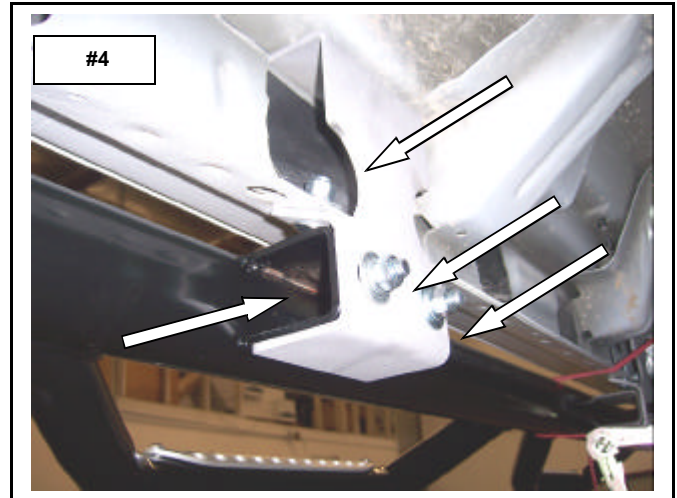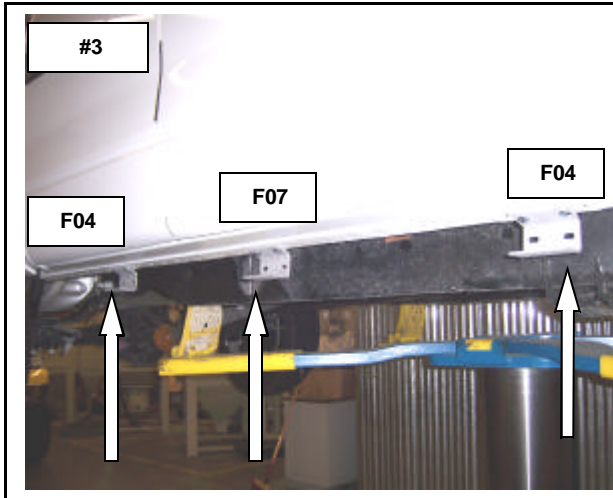

STEP 4. ALIGN THE SIDE STEP WITH THE VEHICLE AND TIGHTEN ALL MOUNTING BRACKET AND SIDE STEP NUTS AND BOLTS. **REPEAT THE ABOVE PROCESS TO INSTALL THE DRIVER SIDE BRACKETS AND SIDE STEP.**



**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**