



## INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D362491 (B)  
09-10 FORD F-150 SUPER CREW P/U 4DR 2/4WD 5.5' BED

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

### PACKING LIST

#### QTY PART DESCRIPTION

12 3/8" X 1" CARRIAGE BOLT  
12 3/8" X 1 1/4" HEX BOLT  
36 3/8" FLAT WASHER  
24 3/8" LOCK WASHER  
24 3/8" HEX NUT



#### QTY PART DESCRIPTION

4 F04 FRONT & REAR BRACKET  
2 F07 CENTER BRACKET  
1 D362491D DRIVER SIDE STEP  
1 D362491P PASSENGER SIDE STEP

### INSTALLATION INSTRUCTIONS



#### READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

**STEP 1.** THIS INSTALLATION USES (3) MOUNTING BRACKETS PER SIDE. BEGIN BY INSTALLING THE SIDE STEP MOUNTING BRACKETS ON THE PASSENGER SIDE OF THE VEHICLE. LOCATE THE HOLES IN THE BODY PINCH MOLD AT THE FRONT, CENTER AND REAR OF THE CAB. **PHOTO #1**

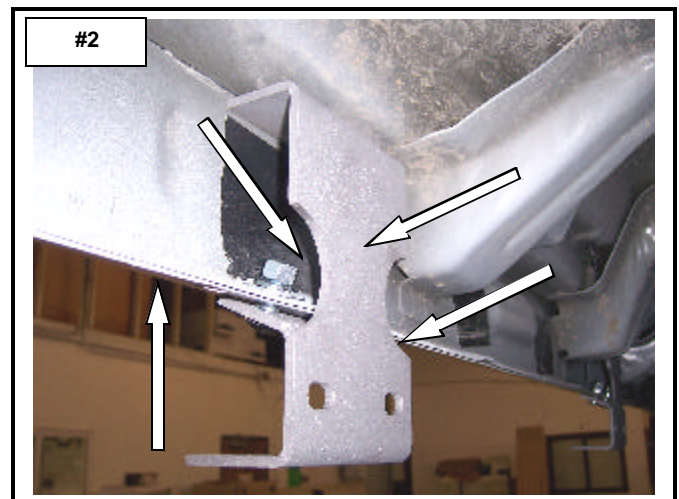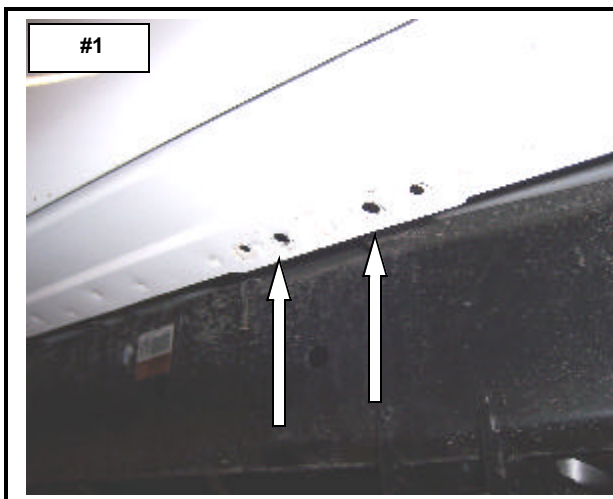

**STEP 2.** ATTACH EACH OF THE MOUNTING BRACKETS TO THE PINCH MOLD USING (2) 3/8" X 1" CARRIAGE BOLTS, (2) FLAT WASHERS, (2) LOCK WASHER AND (2) HEX NUTS. HAND

**STEP 3.** ATTACH THE PASSENGER SIDE STEP TO EACH OF THE MOUNTING BRACKETS USING (2) 3/8" X 1 1/4" HEX BOLTS, (4) FLAT WASHERS, (2) LOCK WASHERS AND (2) HEX NUTS. **PHOTO #4**

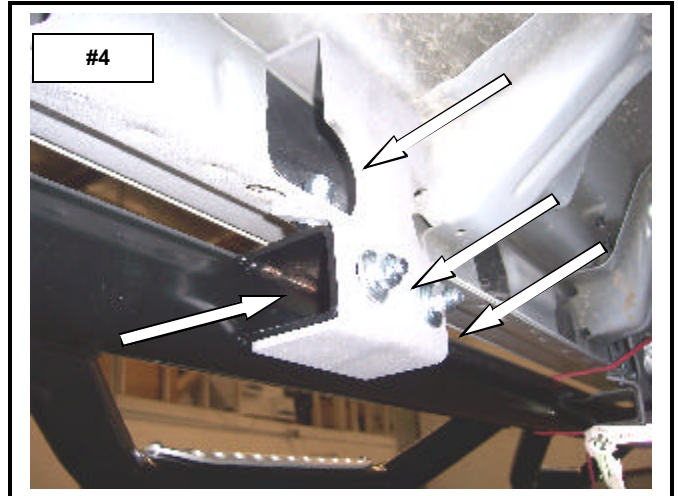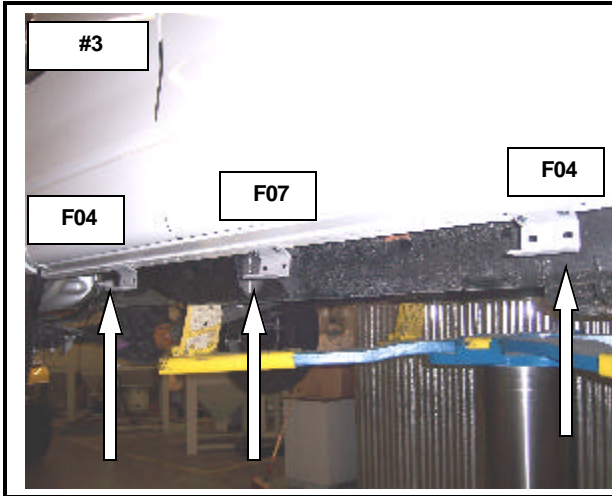

**STEP 4.** ALIGN THE SIDE STEP WITH THE VEHICLE AND TIGHTEN ALL MOUNTING BRACKET AND SIDE STEP NUTS AND BOLTS. **REPEAT THE ABOVE PROCESS TO INSTALL THE DRIVER SIDE BRACKETS AND SIDE STEP.**



**FOR TECHNICAL OR WARRANTY INFORMATION CALL:  
TOLL FREE (888)427-4466 FAX (714)672-0278  
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**