


PART # - 532A 1955 - 1957 SEDAN, NOMAD, WAGON BODY MOUNT KIT




Revised 12/2017

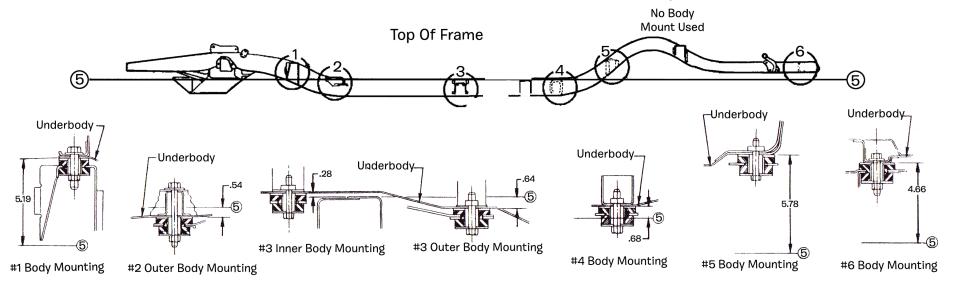





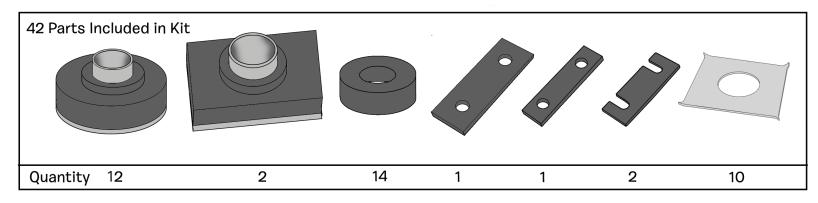

1955 - See Passenger Factory Assembly Instruction Manual # 506. For detailed installation illustrations starting Section 1 Sheet 16.00 through 27.01 1956 - See Passenger Factory Assembly Instruction Manual # 507. For detailed installation illustrations starting Section 1 Sheet 18.00 through 29.01

1957 - See Passenger Factory Assembly Instruction Manual # 508. For detailed installation illustrations starting Section 1 Sheet 17.00 through 29.00