


Trunk Weatherstrip Installation

INSTRUCTIONS

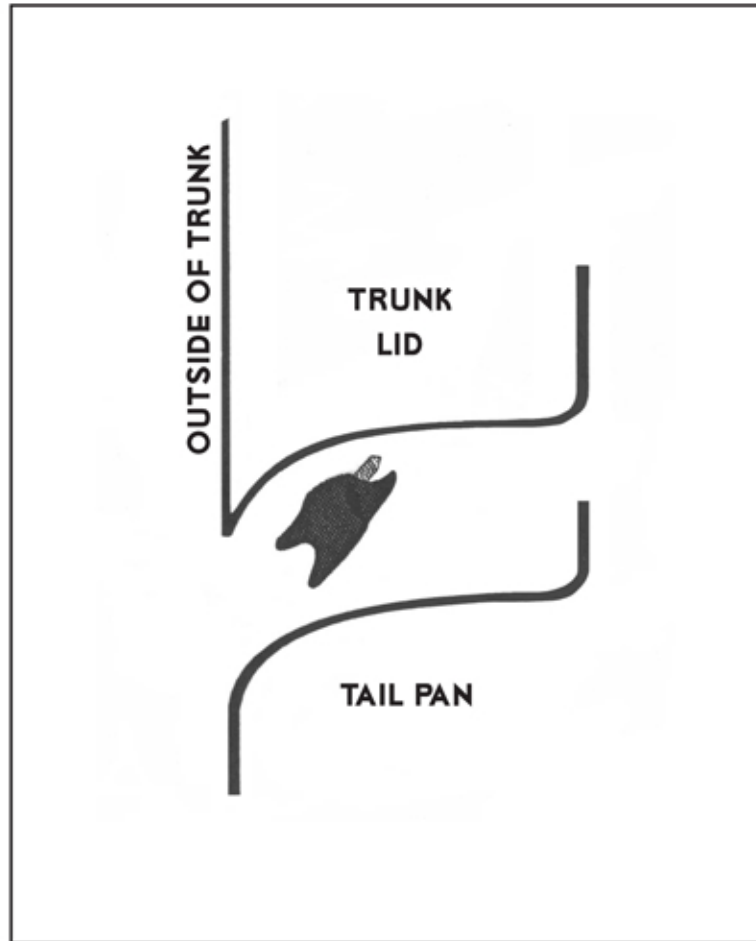

1. Clean the surface of the rubber that is going to be glued to the trunk lid with 3M General Purpose Adhesive Cleaner, our part #884, or with lacquer thinner.
2. Clean the painted surface of the trunk lid with 3M General Purpose Adhesive Cleaner or with soap and water.
3. Using a hammer and a round cylindrical object (i.e., wooden dowel, brass drift), lightly tap the plastic clips into the existing holes.
4. Carefully lift the weatherstrip between the clips and apply a medium bead of our part #036, 3M Weatherstrip Adhesive.
5. Keep the trunk lid open for a minimum of four hours to allow the adhesive to cure. For best results, we recommend that you leave the trunk open overnight.

Danchuk would like to thank you for purchasing this quality reproduction part. You, the consumer, are the best source of opinions, comments, and suggestions. Should you have any comments or recommendations for this instruction sheet and/or part, please feel free to contact us.