

Audio System Upgrade Package 2007-UP Dodge Caliber 2007- UP Jeep Compass 2007- UP Jeep Patriot 2011- UP Dodge Charger Rear Door (12 Channel Premium Only) 2011- UP Chrysler 300 Rear Door (12 Channel Premium Only) 2013 – Up Dodge Dart – Rear Deck – Premium Audio Only


### Installation Instructions

# **CONTENTS**

2EA. 3.5" TWO WAY SPEAKER 1EA. INSTRUCTIONS P/N 68039662AB P/N RBI77KICK25AB

#### Music Gate<sup>TM</sup> Speaker Installation


- 1. Open the rear hatch and unlatch the articulating speaker housing allowing it to swing down. Fig. 1
- 2. Using a Phillips screwdriver remove the ten screws that attach the front and rear portions of the housing as indicated by the arrows in Fig. 1.
- 3. With the two halves separated, use a scratch awl to depress the retainer on the speaker connectors and disconnect the wiring to each of the speakers. Fig. 2

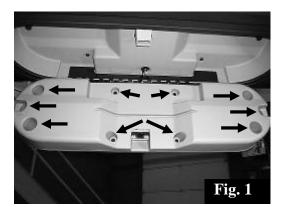



- 4. Using a Phillips screwdriver, remove the two screws securing each speaker. Fig. 3
- 5. Install the replacement speakers and reinstall screws and reconnect wiring. Fig. 4
- 6. Replace all previously removed parts.



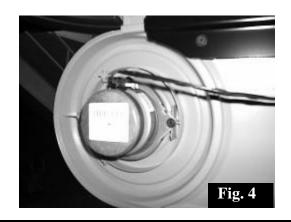



Audio System Upgrade Package 2007-UP Dodge Caliber 2007- UP Jeep Compass 2007- UP Jeep Patriot 2011- UP Dodge Charger Rear Door (12 Channel Premium Only) 2011- UP Chrysler 300 Rear Door (12 Channel Premium Only) 2013 – Up Dodge Dart – Rear Deck – Premium Audio Only

Installation Instructions


#### 2011- UP Dodge Charger, Chrysler 300 Rear Door

- 1. Using a pick tool, remove the screw cover behind the door release lever and on the armrest and remove the screws. Fig. 5
- 2. Using a panel removal tool pry loose the switch plate and disconnect the wiring. Fig. 6





- 3. Snap loose the door panel using a panel removal tool and disconnect wiring.
- 4. Remove the two screws securing the speaker, disconnect wiring and remove speaker.
- 5. Install the upgrade speaker and replace screws. Fig. 7
- 6. For reassembly, remove the window felt by releasing the four metal clips securing it to the door panel. Reinstall the window felt onto metal along the top of the door and then reinstall the door panel in reverse order. Fig. 8

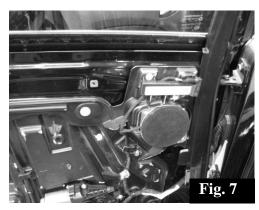





Audio System Upgrade Package 2007-UP Dodge Caliber 2007- UP Jeep Compass 2007- UP Jeep Patriot 2011- UP Dodge Charger Rear Door (12 Channel Premium Only) 2011- UP Chrysler 300 Rear Door (12 Channel Premium Only) 2013 – Up Dodge Dart – Rear Deck – Premium Audio Only

Installation Instructions

## Dodge Dart Rear Deck

- 1. Lower the rear seat backs.
- 2. Remove the three plastic fasteners securing the rear package tray and pull the package tray out of the vehicle. Fig. 9
- 3. Remove the screws securing the factory speakers, disconnect speaker wiring and remove speakers. Fig. 10
- 4. Install upgrade speakers using factory screws.

