



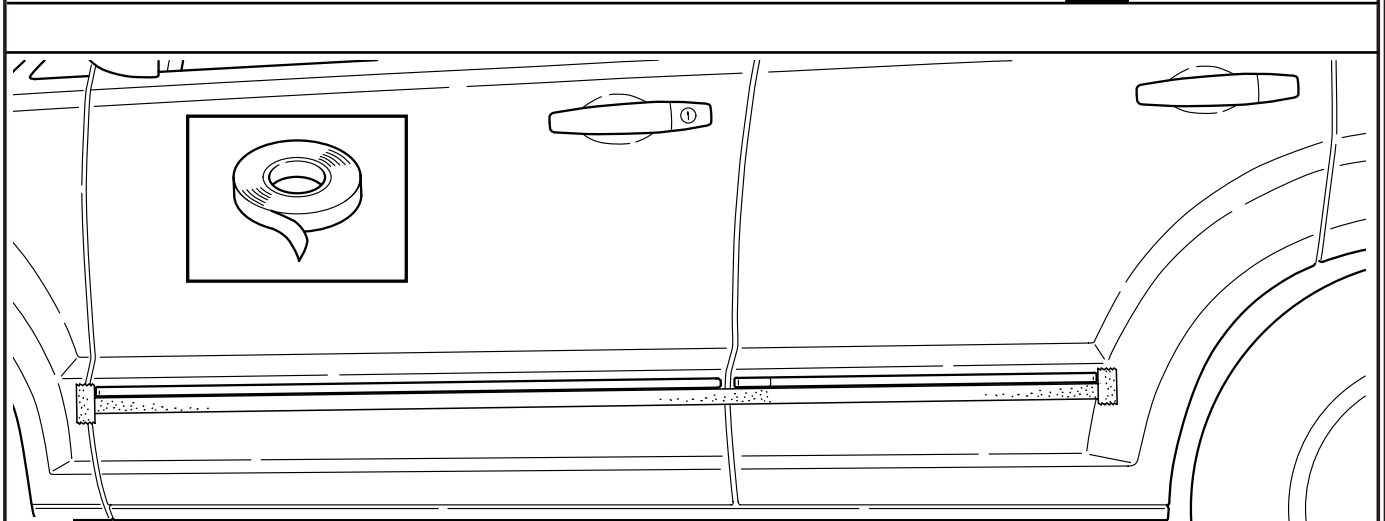


MOPAR®





DODGE CALIBER

Chrome Door Mouldings

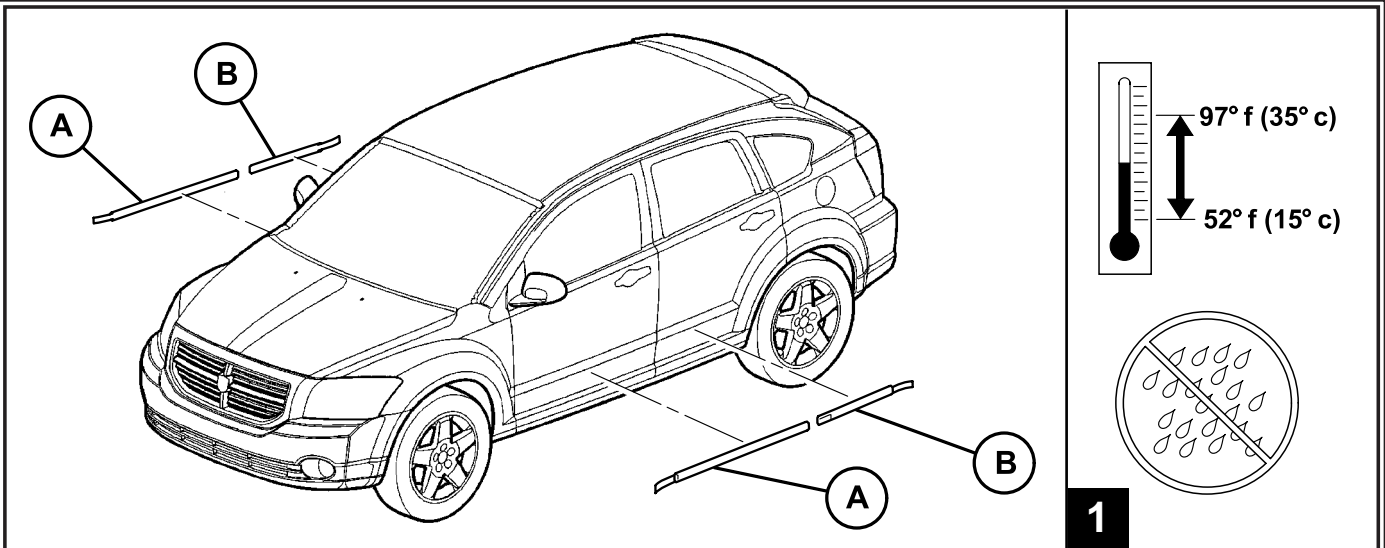

2 If vehicle has factory installed mouldings, apply masking tape as shown.

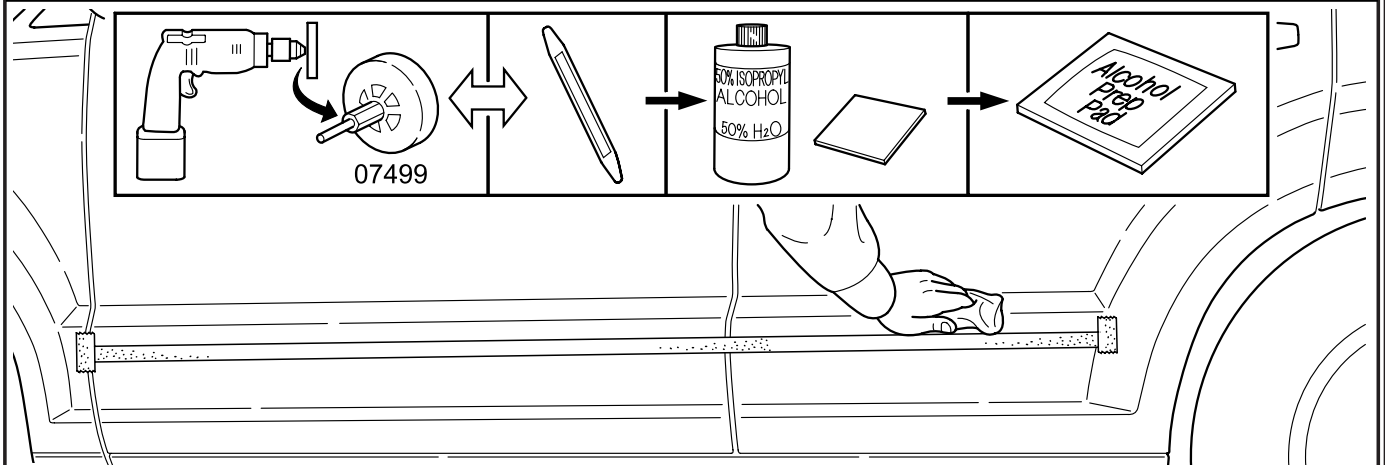

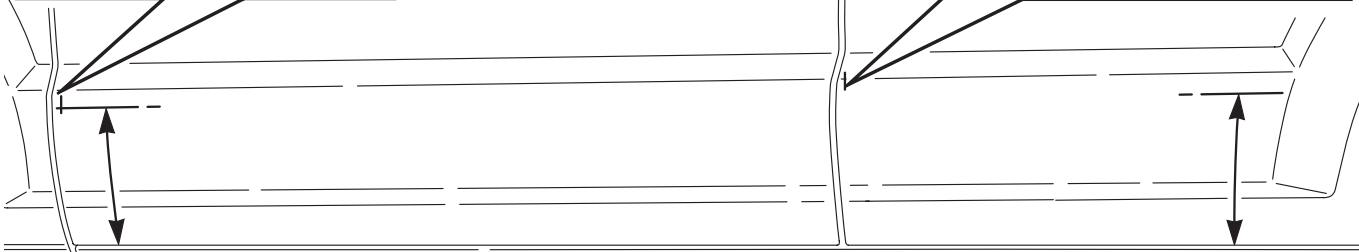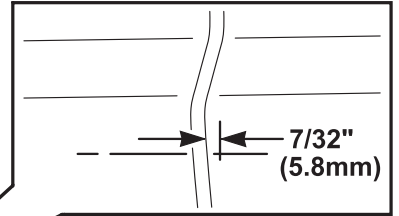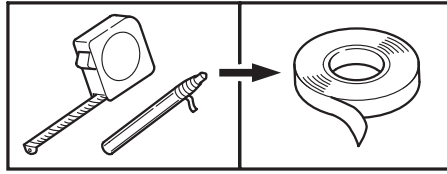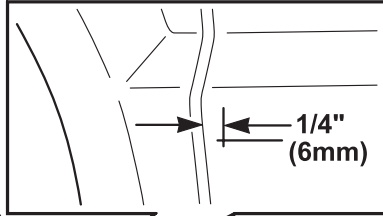

4 If vehicle has no mouldings, measure as shown and apply masking tape.

