## INSTALLATION

**Tools Required** 

Soap & Water

Clean Dry Cloth

PLEASE READ INSTRUCTIONS INSTALLING PRODUCT, BEFORE



of the Window Visor.


Window Visor indicates the rear end


The half notch at the end of the




3. Position the rear section of the window channel. Window Visor into the rubber

w



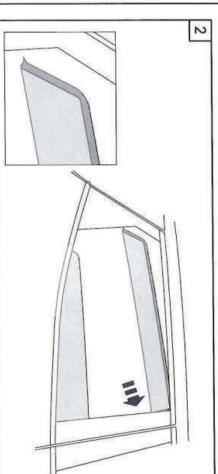

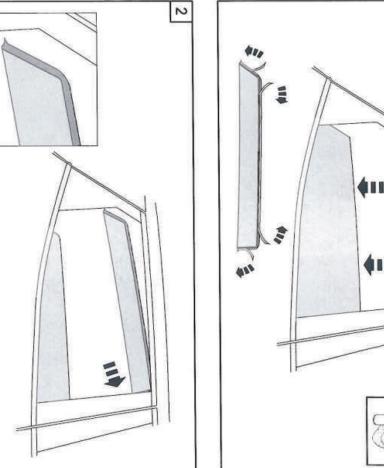

2. Fit the front section of the Window

Visor into the rubber window

channel, as shown.



15°C

4. Work the Window Visor into the

ensuring it locates securely.

rubber window channel by hand

### P 2/2

# INSTALLATION

**Tools Required** 


Soap & Water






PLEASE READ NSTRUCTIONS INSTALLING PRODUCT, BEFORE









15°C

Protector. washes.

5. Ensure the Window Visor is located outwards at the rear of the part while rubber window channel. Pull the in the outer most section of the window channel. Window Visor into the rubber minimum of 5 times to help seat the raising and lowering the window a bottom of the Window Visor

IMPORTANT: Before fitting product, read instruction fully. Full tape strength is product. the above procedure to remove this for 4hrs before driving vehicle. Reverse achieved after 72hrs. Allow tape to cure

- To Clean:
  Use mild detergent and water solution
- · Avoid the use of automatic "Brush Style" car Do not use solvents
- When closing the hood, do not pull on Hood

