

# Instruction Sheet #4.7128 Track Rod Bushing Set



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.


Remove original rubber/shell, Clean I.D. of eye of any old rubber or rust. When installing polyurethane bushings, apply grease as instructed. Apply light coat of grease to I.D. of the rod-eye and the I.D. and O.D. of bushings (all surfaces that contact metal), and the O.D. Of the sleeve. Install the bushing first then install the inner metal sleeve. Reinstall arms and tighten all bolts/nuts to factory specifications.

## WELDED STEEL STYLE ARM



**NOTE:** There will be two extra bushings depending on which arm you have, discard the unused bushings.  
**NOTE:** The supplied sleeve will work for either type of arms.

## ONE PIECE CAST STYLE ARM

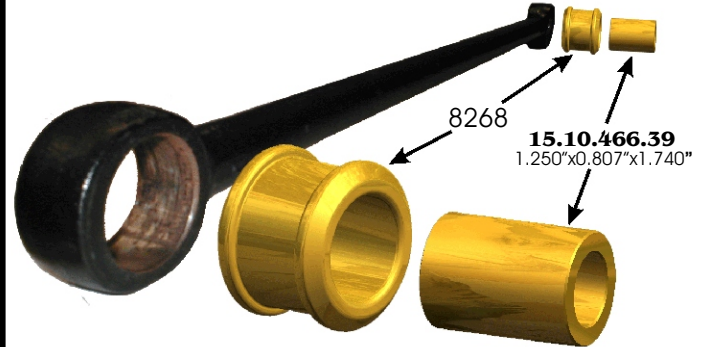

© 2004 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

123004

17433

# Instruction Sheet #4.7128 Track Rod Bushing Set



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.


Remove original rubber/shell, Clean I.D. of eye of any old rubber or rust. When installing polyurethane bushings, apply grease as instructed. Apply light coat of grease to I.D. of the rod-eye and the I.D. and O.D. of bushings (all surfaces that contact metal), and the O.D. Of the sleeve. Install the bushing first then install the inner metal sleeve. Reinstall arms and tighten all bolts/nuts to factory specifications.

## WELDED STEEL STYLE ARM



**NOTE:** There will be two extra bushings depending on which arm you have, discard the unused bushings.  
**NOTE:** The supplied sleeve will work for either type of arms.

## ONE PIECE CAST STYLE ARM

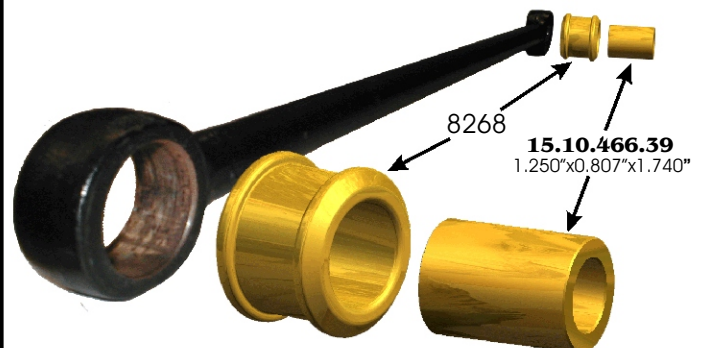

© 2004 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

123004

17433