

09-12 NISSAN CUBE

Billet Grille 2 Pc.

TOOLS REQUIRED:

Phillips & Flat Screwdrivers
8mm & 10mm Socket
and Ratchet

PARTS LIST

(2) 6/32" Nylon Lock Nuts
(2) 2" x 6/32" Machine Screws
(2) #8 - 1" 6 Head Screws
(2) 1/2" L Brackets
(2) Small White Nylon Inserts
(2) Billet Grilles



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Factory Grill Removal

Remove the factory grill by using a flat screwdriver to remove the 4 plastic pop clips from the top of the factory grill. (Fig 1) Next unlatch the 2 latches on the top outside corners of the factory grille, they are difficult to see so you may have to look for them. (Fig 2) Use a flat screwdriver to pry the latches while pulling the top edges of the factory grille forward. Next reach down behind the factory grill, there are 4 latches across the bottom of the factory grille, use a flat screwdriver to pry them loose while pulling the factory grille forward. Remove the factory grille.

Step 2 Upper Billet Grille Installation

Take 2 of the plastic pop clips and reinstall them into the 2 center holes where you removed them from. These are the holes with the black plastic housings. (Fig 3) Next insert the 2 small white nylon inserts into the 2 horizontal rectangular holes in the bottom of the black plastic housing where the factory grill was removed. (Fig 4) Insert the billet grille into the vehicle with the 2 bent arms on top facing toward the back of the vehicle, the billet arms will slide below the 2 metal arms on the vehicle. Take the 2 remaining plastic pop clips and insert them into the holes in the metal arms, make sure they go through all the way. (Fig 5) Next take the two #8 - 1" 6 head screws and insert them through the billet grille and the small brackets that are welded to the backside of the grille and have a small hole in them. The screws will insert into the 2 small nylon inserts, tighten with a phillips screwdriver. (Fig 6)

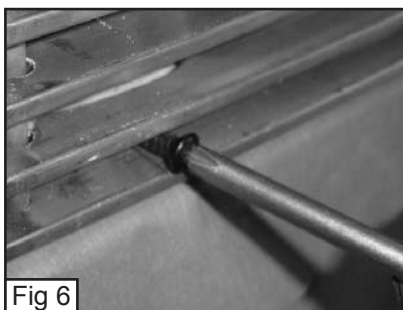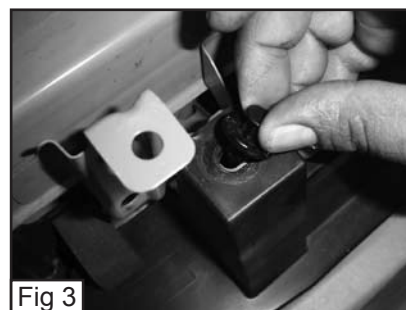

20772
09-12 NISSAN
CUBE



20772
09-12 NISSAN
CUBE

2010 NISSAN CUBE **Billet Grille 2 Pc.**

Step 3 Factory Lower Cover Removal

To install the lower billet grille you will need to remove the forward lower cover from underneath the vehicle. There are five 10mm bolts and 7 plastic pop clips that need to be removed. (Fig 6)

Step 4 Lower Billet Installation

After the bottom cover is removed you will have access to the backside of the lower billet for installation. Take the lower billet and insert it into the lower opening on the vehicle below the main grille. (Fig 7) Insert the two 2" 6/32" machine screws through the front of the billet grille and through the 2 small square brackets with holes in them that are welded on the backside of the billet grille. (Fig 8) From underneath the vehicle, reach up behind the billet grille and locate the 2" machine screws. Take the 1/2" L brackets and place them over the 2" machine screws with the L bracket latched over the vertical plastic bar behind the billet grille. Place the 6/32" nylon lock nuts over the L brackets and tighten. (Fig 9) Installation complete.

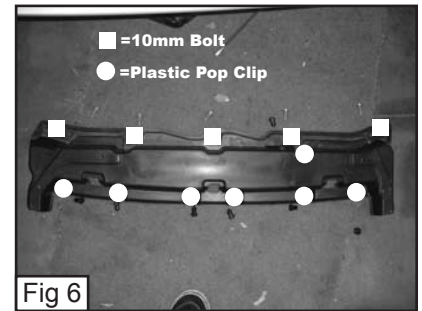


Fig 6



Fig 7

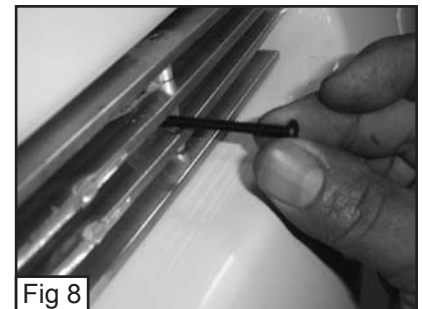


Fig 8



Fig 9