

T-REX

Billet Grilles

25736

06-07 HONDA
2 DR. CIVIC
BUMPER INSERT

25736

06-07 HONDA
2 DR. CIVIC
BUMPER INSERT

2006-07 HONDA CIVIC (2 DOOR COUPE) **BUMPER INSERT**

Tools Required:

Phillip Screwdriver
Slotted Screwdriver
5/16" Wrench


Hardware / Parts Included:

1 Billet Insert (11 Bars)
4 6-32 x 2" Screws
4 6-32 Nylon Lock Nuts
4 2" Flange Brackets

Read and understand instructions before attempting installation

Step 1

Remove the fasteners holding the radiator cover in place; remove the cover. Remove the bolts securing the bumper cover to the core support (located near the radiator mounts). Pull the bumper cover forward; remove the nine small Phillips screws securing the grille. Now unfasten the molded clips and separate the grille.

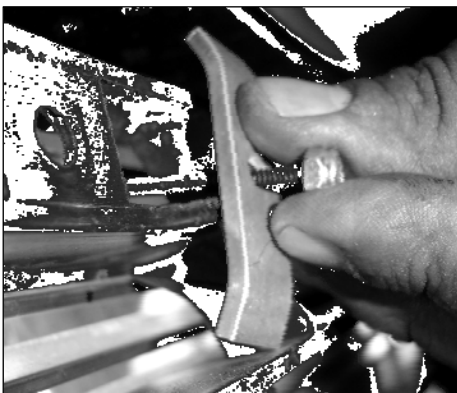

Step 2

Test fit the billet insert over the bumper opening. Install the screws into the tabs on the billet. From the back of the bumper, install a flange bracket and lock nut onto each screw (picture). Tighten the hardware until the billet is held in place.

Step 3

Re-install the grille and radiator cover. *Thank you for purchasing a T-Rex Billet Grille. 8/31/06*