

25782
08-12 NISSAN
ARMADA



25782
08-12 NISSAN
ARMADA

08-12 NISSAN ARMADA
Billet Bumper

Tools Required:

Phillips / Slotted Screwdrivers
5/16" Wrench or Nut Driver


Hardware / Parts Included:

1 Bumper Insert
4 1 1/2" J-Hooks
4 1 1/4" Philips Screws (#6 Head)
4 U-Nuts

Read and understand instructions before attempting installation

Step 1

Factory grille shell must be removed first. On top of the grille; use a small slotted screwdriver to release (1/4 turn) four plastic fasteners. Slightly pull the grille forward. Now release three clips along the bottom of the grille. Remove the grille.

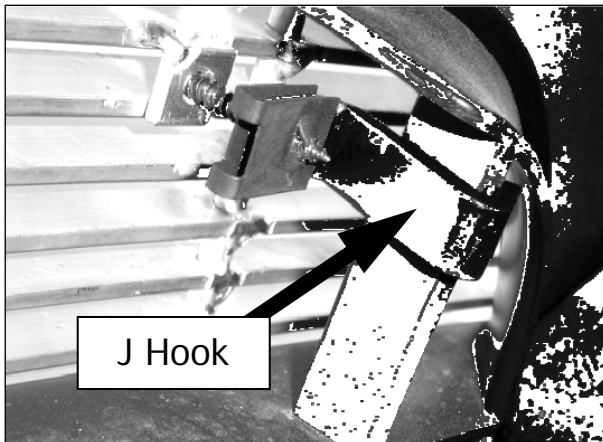

Step 2

Install a #8 U-Nut over flat end of J-Hook bracket. Place the grille insert into the factory bumper opening. Install a screw into mounting holes from the front side of grille. Wrap the J hooks around the plastic bars in the bumper. Tighten the hardware. Repeat this process on other side.

Step 3

Re-install the air shrouds and grille assembly back onto the vehicle. *Thank you for purchasing a T-Rex Billet Grille. 7/19/07*